

# How to configure PowerAlert on Linux with the APC BackUPS Pro 280VA, and the PowerAlert executable

272 Victoria Andreatta March 28, 2010 [Power Protection](#), [RedHat Linux](#) 1241

## How To Configure PowerAlert on Linux with the APC BackUPS Pro 280VA

(v2.0, 5Sept2002)

This How-To explains the steps involved in setting up a Dell or Penguin computer system with Red Hat Linux v7.3 for use with the APC BackUPS Pro 280VA uninterruptible power supply (UPS) and Poweralert Plus UPS software. The document is divided into 7 sections:

1.  
Requirements
2.  
Hardware Configuration
3.  
Software, Part 1 (installation and configuration)
4.  
OS Configuration
5.  
Software, Part 2 (configuration)
6.  
Testing
7.  
Troubleshooting

[See [attached .pdf file](#) or [attached .doc file](#) for more.]

Download [painstall.tar.gz](#) for PowerAlert software compatible with RedHat Linux v7.3.

Online URL:

<https://kb.unavco.org/article/how-to-configure-poweralert-on-linux-with-the-apc-backups-pro-280va-and->

[the-poweralert-executable-272.html](#)