

# How to configure PowerChutePlus on Linux with the APC BackUPS Pro 280VA, and the PowerChutePlus executable (2002)

273 Victoria Andreatta March 28, 2010 [Power Protection](#), [RedHat Linux](#) 2516

## How To Configure PowerChutePlus on Linux with the APC BackUPS Pro 280VA

(v1.0, 7Feb2002 written by: Jay Sklar)

This How-To explains the steps involved in setting up a Dell or Penguin computer system with Red Hat Linux v7.1 for use with the APC BackUPS Pro 280VA uninterruptible power supply (UPS) and PowerChute Plus UPS software. The document is divided into 7 sections:

1.  
Requirements
2.  
Hardware Configuration
3.  
Software, Part 1 (installation and configuration)
4.  
OS Configuration
5.  
Software, Part 2 (configuration)
6.  
Testing
7.  
Troubleshooting

[See [attached .pdf file](#) or [attached .doc file](#) for more.]

Download [PowerChutePlus-4.5.3-1\\_RedHat.i386.rpm](#) for PowerChutePlus software compatible with RedHat Linux v7.1.

Online URL:

<https://kb.unavco.org/article/how-to-configure-powerchuteplus-on-linux-with-the-apc-backups-pro-280va-and-the-powerchuteplus-executable-2002-273.html>