

## Telebit WorldBlazer (T3SA) - Configuration Examples

340 Beth Bartel July 1, 2009 [Telebit Worldblazer \(T3SA\)](#) 11464

### Telebit WorldBlazer (T3SA) - Configuration Examples

Suggested modem settings for local connection (modem attached to download computer), firmware v.LA7.05C, receiving data from a Trimble 4000 SSE/SSi

```
WorldBlazer - SA - Version LA7.05C- Active Configuration
 B1 E0 L2 M1 P Q0 V1 X1 Y0
&C0 &D0 &G0 &J0 &L0 &Q0 &R3 &S0 &T4 &X0
S000:1 S001=0 S002=43 S003=13 S004=10 S005=8 S006=2 S007:120
S008=2 S009=6 S010:70 S011:120 S012:100 S018=0 S025=5 S026=1
S038=0 S041:1 S045:255 S046=0 S047=4 S048=0 S050:6 S051:4
S056=17 S057=19 S058:0 S059=0 S060=0 S061=1 S062=15 S063=0
S064:1 S068=255 S069=0 S090=0 S092=0 S093=8 S094=1 S100=0
S104=0 S105:0 S111:20 S112=1 S113=126 S114=0 S115=0 S116=0
S119=0 S151:3 S155=0 S180=2 S181=1 S183=25 S190:0 S191:6
S253=10 S254=1 S255=0
OK
```

Suggested modem settings for remote connection (modem communicating with GNSS receiver), firmware v.LA7.05C, transmitting data from a Trimble 4000 SSE/SSi

```
WorldBlazer - SA - Version LA7.05C- Active Configuration
 B1 E0 L2 M0 P Q0 V1 X1 Y0
&C0 &D0 &G0 &J0 &L0 &Q0 &R3 &S0 &T4 &X0
S000:1 S001=0 S002=43 S003=13 S004=10 S005=8 S006=2 S007:120
S008=2 S009=6 S010:70 S011:120 S012:100 S018=0 S025=5 S026=1
S038=0 S041:1 S045:255 S046=0 S047=4 S048=0 S050:6 S051:6
S056=17 S057=19 S058:0 S059=0 S060=0 S061=1 S062=15 S063=0
S064:1 S068=255 S069=0 S090=0 S092=0 S093=8 S094=1 S100=0
S104=0 S105:0 S111=255 S112=1 S113=126 S114=0 S115=0 S116=0
S119=0 S151:3 S155=0 S180=2 S181=1 S183=25 S190:0 S191:6
S253=10 S254=1 S255=0
OK
```

Online URL: <https://kb.unavco.org/article/telebit-worldblazer-t3sa-configuration-examples-340.html>