

Proxicast LAN-Cell Gateway - How to configure a UNAVCO LAN-Cell 2 modem (internal)

423 Beth Bartel June 29, 2009 [Proxicast](#) 693

How to configure a UNAVCO LAN-Cell 2 modem

Configuration files

- [UNAVCO_aqp3_ac881patch_cingular](#)
- [UNAVCO_aqp3-102708_sprint-verizon](#)

How to configure

1. Reset to Factory Defaults. Login at <http://192.168.1.1>, password "1234". Change password to UNAVCO default, accept new certificate.

2. Update firmware as necessary.

3a. Reload firmware/carrier-appropriate UNAVCO config, or reconfigure from scratch--web interface first:

3b. Reconfigure from scratch; add soft reboot timers via SSH interface:

Online URL:

<https://kb.unavco.org/article/proxicast-lan-cell-gateway-how-to-configure-a-unavco-lan-cell-2-modem-internal-423.html>

