

# Intuicom - How to configure an Intuicom wireless Ethernet bridge using CommPro software

525 Beth Bartel January 27, 2010 [CommPro Software](#) 2087

## How to configure an Intuicom wireless Ethernet bridge using CommPro software

To configure an Intuicom wireless Ethernet bridge using CommPro software you must have:

- Intuicom CommPro software, available from the UNAVCO Knowledgebase
- Intuicom programming cable (serial)

### To configure the Intuicom wireless Ethernet bridge:

1. Connect radio to power.
2. Connect radio to computer via programming cable.
3. Open CommPro.
4. In CommPro, select "Configurator" from the left-hand icons.
5. Select appropriate comm port.
6. Open a config file from the computer (File-->Open Config...-->select file) or start a new one (File-->New...-->Config...-->select radio type), even if you just want to see what's currently on the radio.
7. If you want to see what's currently on the radio, select "Read Config" (top menu).
8. Either change the settings as appropriate or select a pre-saved configuration file (File-->Open Config...-->select file).
9. Select "Program Radio" (top menu), follow directions and select "Continue".
10. Select "Read Config" again (top menu) if you would like to confirm your settings.
11. Select File-->Close Config.

*bab2009*

Online URL:

<https://kb.unavco.org/article/intuicom-how-to-configure-an-intuicom-wireless-ethernet-bridge-using-commpro-software-525.html>