

NetRS™ GPS Receiver

User Guide



Version 1.0
Revision A
October 2003

Corporate Office

Trimble Geomatics and Engineering Division
5475 Kellenburger Road
Dayton, Ohio 45424-1099
U.S.A.

800-538-7800 (Toll Free in U.S.A.)
+1-937-233-8921 Phone
+1-937-233-9004 Fax
www.trimble.com

Copyright and Trademarks

Copyright © 2003, Trimble Navigation Limited. All rights reserved.

Trimble, and the Globe & Triangle logo are trademarks of Trimble Navigation Limited, registered in the United States Patent and Trademark Office.

CMR+, TRIMCOMM, TRIMMARK, TRIMTALK, EVEREST, and Zephyr are trademarks of Trimble Navigation Limited.

Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

All other trademarks are the property of their respective owners.

Release Notice

This is the October 2003 release (Revision A) of the *NetRS User Guide*. It applies to version 1.0 of the NetRS™ receiver.

The following limited warranties give you specific legal rights. You may have others, which vary from state/jurisdiction to state/jurisdiction.

Hardware Limited Warranty

Trimble Navigation Limited warrants that this hardware product (the "Product") will perform substantially in accordance with published specifications and be substantially free of defects in material and workmanship for a period of one (1) year starting from the date of delivery. The warranty set forth in this paragraph shall not apply to software products.

Software License, Limited Warranty

This Trimble software product, whether provided as a stand-alone computer software product, built into hardware circuitry as firmware, embedded in flash memory, or stored on magnetic or other media, (the "Software") is licensed and not sold, and its use is governed by the terms of the relevant End User License Agreement ("EULA") included with the Software. In the absence of a separate EULA included with the Software providing different limited warranty terms, exclusions and limitations, the following terms and conditions shall apply. Trimble warrants that this Trimble Software product will substantially conform to Trimble's

applicable published specifications for the Software for a period of ninety (90) days, starting from the date of delivery.

Warranty Remedies

Trimble's sole liability and your exclusive remedy under the warranties set forth above shall be, at Trimble's option, to repair or replace any Product or Software that fails to conform to such warranty ("Nonconforming Product") or refund the purchase price paid by you for any such Nonconforming Product, upon your return of any Nonconforming Product to Trimble in accordance with Trimble's standard return material authorization procedures.

Warranty Exclusions and Disclaimer

These warranties shall be applied only in the event and to the extent that (i) the Products and Software are properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Trimble's relevant operator's manual and specifications, and; (ii) the Products and Software are not modified or misused. The preceding warranties shall not apply to, and Trimble shall not be responsible for defects or performance problems resulting from (i) the combination or utilization of the Product or Software with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Trimble; (ii) the operation of the Product or Software under any specification other than, or in addition to, Trimble's standard specifications for its products; (iii) the unauthorized modification or use of the Product or Software; (iv) damage caused by accident, lightning or other electrical discharge, fresh or salt water immersion or spray; or (v) normal wear and tear on consumable parts (e.g., batteries). Trimble does not warrant or guarantee the results obtained through the use of the Product.

THE WARRANTIES ABOVE STATE TRIMBLE'S ENTIRE LIABILITY, AND YOUR EXCLUSIVE REMEDIES, RELATING TO PERFORMANCE OF THE PRODUCTS AND SOFTWARE. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED HEREIN, THE PRODUCTS, SOFTWARE, AND ACCOMPANYING DOCUMENTATION AND MATERIALS ARE PROVIDED "AS-IS" AND WITHOUT EXPRESS OR IMPLIED WARRANTY OF ANY KIND BY EITHER TRIMBLE NAVIGATION LIMITED OR ANYONE WHO HAS BEEN INVOLVED IN ITS CREATION, PRODUCTION, INSTALLATION, OR DISTRIBUTION INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NONINFRINGEMENT. THE STATED EXPRESS WARRANTIES ARE IN LIEU OF ALL OBLIGATIONS OR LIABILITIES ON THE PART OF TRIMBLE ARISING OUT OF, OR IN CONNECTION WITH, ANY PRODUCTS OR SOFTWARE. SOME STATES AND JURISDICTIONS

DO NOT ALLOW LIMITATIONS ON DURATION OR THE EXCLUSION OF AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

TRIMBLE NAVIGATION LIMITED IS NOT RESPONSIBLE FOR THE OPERATION OR FAILURE OF OPERATION OF GPS SATELLITES OR THE AVAILABILITY OF GPS SATELLITE SIGNALS.

Limitation of Liability

TRIMBLE'S ENTIRE LIABILITY UNDER ANY PROVISION HEREIN SHALL BE LIMITED TO THE AMOUNT PAID BY YOU FOR THE PRODUCT OR SOFTWARE LICENSE. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL TRIMBLE OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER UNDER ANY CIRCUMSTANCE OR LEGAL THEORY RELATING IN ANY WAY TO THE PRODUCTS, SOFTWARE AND ACCOMPANYING DOCUMENTATION AND MATERIALS, (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS), REGARDLESS WHETHER TRIMBLE HAS BEEN ADVISED OF THE POSSIBILITY OF ANY SUCH LOSS AND REGARDLESS OF THE COURSE OF DEALING WHICH DEVELOPS OR HAS DEVELOPED BETWEEN YOU AND TRIMBLE. BECAUSE SOME STATES AND JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

NOT WITHSTANDING THE ABOVE, IF YOU PURCHASED THIS PRODUCT OR SOFTWARE IN THE EUROPEAN UNION, THE ABOVE WARRANTY PROVISIONS MAY NOT APPLY. PLEASE CONTACT YOUR DEALER FOR APPLICABLE WARRANTY INFORMATION.

Notices

Class B Statement – Notice to Users. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes and modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission rules.

Regulations and Safety

STATEMENT ACCORDING FCC PART 15.19

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

STATEMENT ACCORDING FCC PART 15.21

Modifications not expressly approved by Trimble could void the user's authority to operate the equipment.

CE Declaration of Conformity

This product conforms to the following standards, and therefore complies with the requirements of the R&TTE Directive 1999/5/EC, which specifies compliance with the essential requirements of EMC Directive 89/336/EEC and Low Voltage Directive 73/23/EEC:

EMC Emissions: BSEN 55022:1998 (W/A1:00) Class B

EMC Immunity: EN 55024:1998

Safety: EN 60950:2000

Mark First Applied: 03

The technical file is maintained at: Trimble Navigation Limited, 645 North Mary Avenue, Post Office Box 3642, Sunnyvale, CA 94088-3642, USA

Contents

1	Introduction	1
	About the NetRS	1
	Related Information	2
	Technical Assistance	2
	Your Comments	2
2	Overview	3
	The Network Appliance Concept	5
	NetRS Services	6
	Use and Care	9
	Electronic Interference	9
	COCOM Limits	9
3	Features and Functions	11
	Features of the Receiver	12
	Front panel	13
	Rear panel	15
	Power ports	17
	Button Functions	17
	Power button operations	18
	Power saving mode	18
	Other power operations	20
	To erase the almanac and the ephemeris	20
	To reset the receiver to factory defaults settings	21
	LED Functions	22
	LED startup sequence	22
	LED flash patterns	24

4	Setting up the Receiver	27
	Setup Guidelines	28
	Environmental conditions	28
	Sources of electrical interference	28
	Uninterruptible power supply	29
	Lightning protection	29
	Mounting the receiver	30
	Placing the antenna.	30
	Connecting the Receiver to Other Devices	31
	Antenna.	31
	Antenna cabling	31
	Met-Tilt sensors	32
	Dial-up modems and terminal adapters	33
	Radio modems	34
	External frequency reference.	34
5	Configuring the Receiver	35
	Setting up Communications.	36
	Configuring the Ethernet connection.	37
	Changing the Ethernet configuration.	40
	Configuring the Receiver Through a Web Browser.	41
	Web-based menu	41
	Configuring the Receiver for Connected Devices	43
	Dial-up modem, radio modem, or terminal adapter	43
	Configuring Met-Tilt sensors	45
	Configuring GPSBase / GPSNet.	46
	Updating the Receiver Firmware	48
	Downloading the firmware upgrade	48
	Uploading the firmware	48
	Installing the firmware upgrade	49
6	Logging and Managing Data.	51
	Data Logging Sessions	52

Creating or editing a session	53
Enabling a session	54
Disabling a session	54
Data Format	54
Naming Files	54
Auto Delete.	55
Managing Files Through the Web Interface	56
Storing files	56
Sorting files	57
Downloading files	57
Deleting files	57
Managing Files Using FTP	58
7 Real-Time Data and Services	61
Streamed Data Services	62
RT17	62
Trimcom	62
Collecting Data as a Client	63
8 Default Settings	65
Introduction	66
A Specifications	69
Introduction	70
B Cables and Connectors	73
Ports	74
Cables and connectors	74
Port pinouts.	75
C 1PPS Output	77
Introduction	78
1PPS Pulse Definition.	78

D	Deployment Issues	79
	Introduction	80
	Planning	80
	Configuring from Factory Defaults	81
	Monitoring Operation	81
	Changing Modes	82
	Changing the Configuration.	82
E	NetRS Support Software.	83
	Introduction	84
	Data Conversion.	84
	T00 to DAT file conversion	84
	RT17 to DAT file conversion.	84
	DAT to RINEX file conversion.	85
F	Setting Up a PPP Connection	87
	Introduction	88
	Linux Operating System	88
	Windows Operating System.	89
	Creating a connection	90
	Configuring the connection	91
	Using the connection.	94
	Closing the session.	95
	Re-connecting the session	95
	Editing connection properties	95
	Deleting a connection	96
	Glossary	97
	Index	105

Introduction

Welcome to the *NetRS GPS Receiver User Guide*. This manual describes how to set up and use the Trimble® NetRS™ GPS receiver.

Even if you have used other Global Positioning System (GPS) products before, Trimble recommends that you spend some time reading this manual to learn about the special features of this product.

If you are not familiar with GPS, visit Trimble's website (www.trimble.com) for an interactive look at Trimble and GPS.

This publication assumes that you are familiar with the Microsoft® Windows® operating system and know how to use a mouse, select options from menus and dialogs, make selections from lists, and refer to online help.

About the NetRS

The Trimble NetRS receiver is a dual-frequency GPS receiver, which runs on a Linux operating system and communicates mainly through local and wide area networks. You can operate the receiver as a standalone reference station or integrate it into a scalable network.

You will use an office computer to configure the receiver, access files, or publish data files to a company intranet or to the Internet.

The NetRS receiver makes it easy for you to set up a powerful, flexible, and reliable reference station for continuous operation.

Related Information

Sources of related information include the following:

- Release notes – the release notes describe new features of the product, information not included in the manuals, and any changes to the manuals.
- Trimble training courses – consider a training course to help you use your GPS system to its fullest potential. For more information, visit the Trimble website at www.trimble.com/support.html.

Technical Assistance

If you have a problem and cannot find the information you need in the product documentation, *contact your local Distributor*. Alternatively, do one of the following:

- Request technical support using the Trimble website at www.trimble.com/support/support.htm
- Send an e-mail to trimble_support@trimble.com.

Your Comments

Your feedback about the supporting documentation helps us to improve it with each revision. E-mail your comments to ReaderFeedback@trimble.com.

Overview

In this chapter:

- Introduction
- The Network Appliance Concept
- NetRS Services
- Use and Care
- Electronic Interference
- COCOM Limits

Introduction

This chapter introduces the NetRS GPS receiver. This receiver makes it easy to deploy a powerful, flexible, and reliable Continuously Operating Reference Station (CORS).

The NetRS receiver integrates the latest dual frequency GPS technology into a Linux processing and communications framework that can operate as a standalone reference station or can be integrated into a scalable network.

With Internet Protocol (IP) as the primary communications method, you can use public domain tools, such as a web browser and FTP client, to configure the receiver and access logged data files.

Note – All references to the “Internet” are intended to mean either a wide area network (WAN) or a local area network (LAN) connection.

The Linux framework provides a foundation that allows Trimble to extend and customize the system in ways which are not possible with a proprietary operating system. Native support for standardized interfaces lets you use a wealth of powerful commercial and public domain software to work with the NetRS receiver.

You can enforce multiple levels of security—from a completely open system that allows anonymous access to all features, to a secured system that requires a password protected login for configuration changes and/or file access.

Use the network management features to:

- Store the configuration of one receiver to a file and restore it to the same receiver at a future date, or clone it to any other receiver in a network.

- Create a base configuration with a variety of operating modes. You can then enable those modes as necessary, rather than having to change the global state of the receiver from one mode to another. For example, you can configure a number of streaming services with different configurations (such as measurement intervals or smoothing controls) on different TCP or UDP ports. To activate one or more modes, open the connection to the specific port. This allows multiple clients to access any given streaming service.
- Create multiple continuous logging session configurations and then enable them only when required.

These features, and many more, shift the model of a GPS receiver toward the concept of a “network appliance”.

The Network Appliance Concept

Traditionally, a GPS receiver has one operator. That person is the only user of that receiver and can change settings without affecting other information users.

With the NetRS, an operator can configure a receiver once, then make it available, as a network appliance, for general use by one or more clients.

This network appliance concept lets you set up the receiver to provide one or more services that are accessible to one or more users through a local area network (LAN) or a wide area network (WAN), such as the Internet. Once the receiver is deployed, you need make only minimal changes, if any, to the receiver configuration.

When the receiver is operating as a network appliance, it provides services to all users attached to the receiver through the network.

Different streamed services may be configured on different ports, for example, with differing data rates or smoothing configurations. To obtain a service, the client has only to connect to a specific port. In this way, most users do not need to control the receiver. Changing global

settings, such as masks, will affect all users of all services. However, the comprehensive set of controls that has been provided for streamed service and data logging configuration avoids global changes for the majority of applications.

The NetRS receiver provides the following standard configuration and data logging services:

Use ...	to perform ...
HTTP	all manual and automated configuration operations
	manual operations to manage the logged data file space
FTP	remote manual and/or automated operations to manage the logged data file space

NetRS Services

The NetRS can provide one or more streaming or query services over a RS232 serial port or a TCP/IP port:

- Protocol service

A protocol service provides functionality over a two-way link. PPP enables IP communications over an RS232 serial link; Trimcom is a binary protocol used by Trimble PC software applications; Met-Tilt provides sensor query and data logging.
- Streaming service

Anyone with authorized access can obtain streamed information, such as GPS measurements or RTCM corrections, without having to control or issue commands to the receiver. The client simply connects to the port that is streaming the required information.
- Query service

No command is required; opening the TCP port triggers data transmission. A query service provides a single source for a specific information type, and returns it without affecting other continuous streams.

Multiple clients can connect simultaneously to a single streaming or query port.

The NetRS supports the following services:

Service	Description	Type
PPP	Point to Point Protocol (PPP) is the Internet standard for transmitting IP packets over serial lines. When you enable the serial port for PPP, you can run the NetRS web configuration interface over the serial port.	Protocol
Trimcom	The Trimcom service supports a subset of the standard Trimble “Trimcom” binary communications protocol. Trimcom is used by Trimble software applications for configurable GPS data streaming and queries.	Protocol
RT17	This service can be configured to provide various combinations of real time GPS measurements, including phase, pseudorange, carrier-to-noise ratios, and other general information about each satellite that is tracked. RT17 is the real-time streamed GPS measurement information. It includes the same information that is stored in Type 17 records in T00 and DAT files This is the basic information used to produce GPS positions and corrections.	Streaming
Met-Tilt	This service can be configured to send one or more device initialization and query strings on a regular basis to obtain measurements from external sensors. These sensors include those used to collect meteorological data and/or deformation data (where the tilt of the sensor is measured). Data from the Met or the Tilt sensor is included in any active R17 stream. If you are using data logging, the data is included in all internally logged T00 files	Protocol
RTCM	This RTCM (Radio Technical Commission for Maritime Services) service can be configured to send one or more RTCM SC-104 messages from the specified port.	Streaming
CMR/ CMR+	This service can be configured to provide real-time GPS measurements in Compact Measurement Record format, primarily for RTK applications that use CMR or CMR+.	Streaming

2 Overview

Service	Description	Type
Ephemerides	This service provides a complete set of GPS ephemerides (orbits) each time an application connects to the selected port.	Query
Almanacs	This service provides a complete GPS almanac each time an application connects to the selected port.	Query
SV Status	This service provides a variety of information about the current GPS and WAAS/EGNOS constellation.	Query

Use and Care

The NetRS receiver is designed to withstand the treatment and environment that typically occurs in a CORS installation. However, the receiver is a high-precision electronic instrument and should be treated with reasonable care.



Warning – Operating or storing the NetRS receiver outside the specified temperature range can damage it. For details, see Appendix A, Specifications.

Electronic Interference

High-power signals from a nearby radio or radar transmitter can overwhelm the receiver circuits. This does not harm the instrument, but it can prevent the receiver electronics from functioning correctly.

Avoid locating the receiver or antenna within 400 meters of powerful radar, television, or other transmitters or GPS antennas. Low-power transmitters, such as those in cell phones and two-way radios, normally do not interfere with NetRS receiver operations.

COCOM Limits

The U.S. Department of Commerce requires that all exportable GPS products contain performance limitations so that they cannot be used in a manner that could threaten the security of the United States. The following limitations are implemented on the NetRS receiver.

Immediate access to satellite measurements and navigation results is disabled when the receiver velocity is computed to be greater than 1000 knots, or its altitude is computed to be above 18,000 meters. The receiver GPS subsystem will reset until the COCOM situation clears. As a result, all logging and stream configurations will stop until the GPS subsystem is cleared.

Features and Functions

In this chapter:

- Introduction
- Features of the Receiver
- Button Functions
- LED Functions

Introduction

This chapter describes the physical features of the NetRS receiver. It also describes how to perform some basic receiver functions.

Features of the Receiver

All operating controls, ports, and connectors on the NetRS receiver are on the front or the rear panels, as shown in Figure 3.1. This section briefly describes these panels.



Figure 3.1 Receiver front and rear panels

Front panel

Figure 3.2 shows the features on the front panel. Table 3.2 describes the features. For more information, see Button Functions, page 17 and LED Functions, page 22.

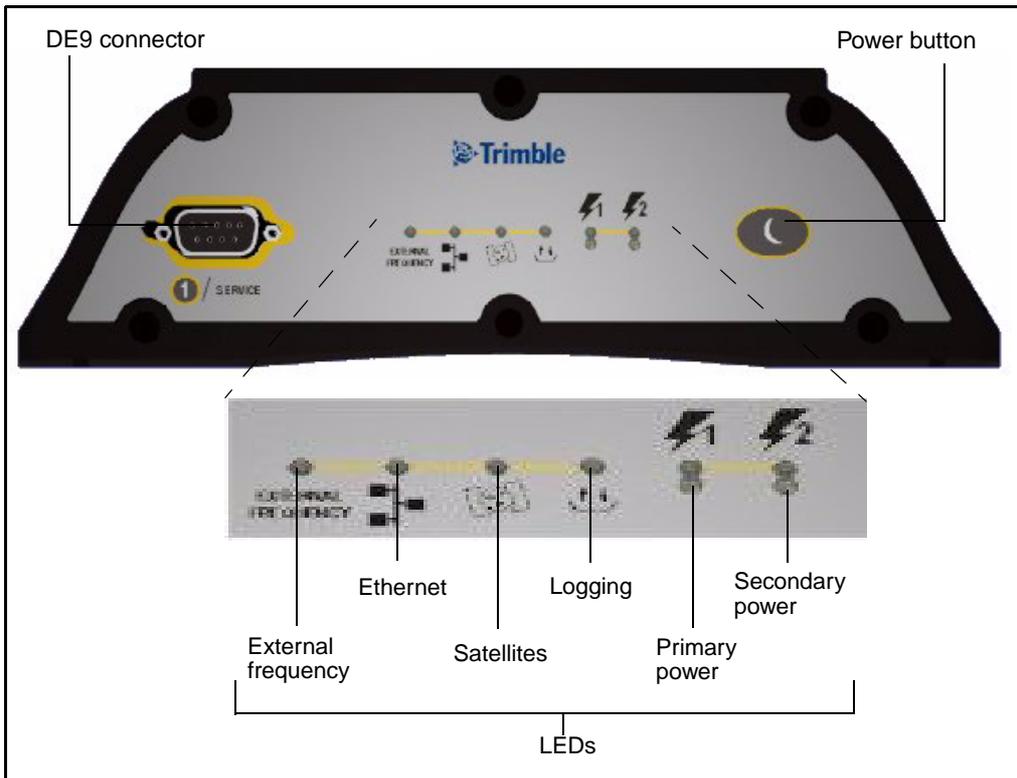


Figure 3.2 Front panel features

Table 3.1 Front panel features

Feature	Description
DE9 port	Provides a service port for initial Ethernet address configuration and diagnostics. The service port uses a 3-wire connection with default parameters of 115,200 baud, 8-NONE-1. Linux diagnostics are available through this port during the boot and shutdown processes.
Power button	Controls the receiver power states
LED indicator	shows ...
External frequency	external oscillator activity
Ethernet	Ethernet port activity
Satellites	satellite tracking status
Logging	logging status to the internal memory
Primary Power	power status on the primary power port
Secondary power	power status on the secondary power port

Rear panel

Figure 3.3 shows the rear panel features. Serial ports can support GPS observables streaming in the RT17 format and streaming CMR, or RTCM format RTK corrections. The ports can also act as a PPP server for IP communications over a serial link.

All supported configuration, streaming, file transfer, and firmware update capabilities are supported over the Ethernet port or any serial port supporting IP communications using PPP.

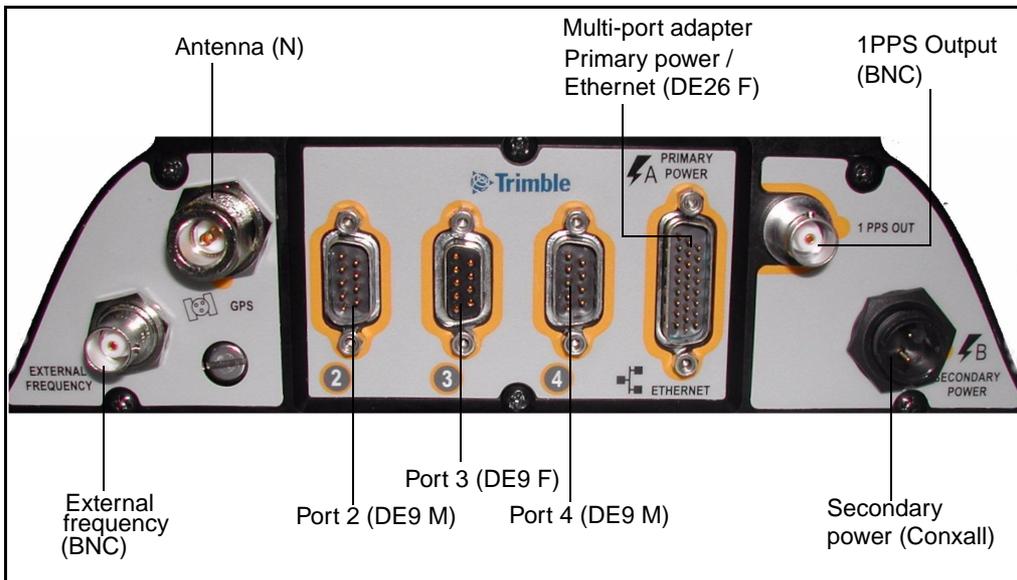


Figure 3.3 Rear panel features

Figure 3.4 shows the multi-port adapter in detail

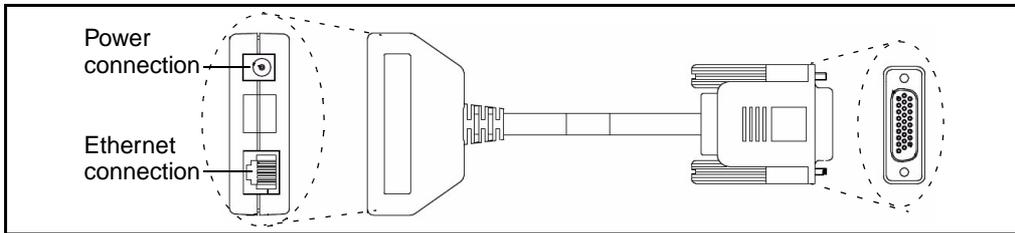


Figure 3.4 Multi-port adapter detail

Table 3.2 Rear panel features

Feature	Description
N connector	Connects to the GPS antenna
Multi-Port adapter (DE26 connector)	Primary power port – AC-to-DC power supply connects through an inline DC power jack. Ethernet port – connects to a 10Base-T network through an RJ45 jack.
BNC port (2)	One PPS output External frequency input
DE9 male port (2)	Connects to a DCE device, such as a modem or a terminal adapter.
DE9 female port	Connects to a DTE device, such as a computer.
<p><i>Note – The 3 rear panel ports include full 9-pin connections that provide all the signals required to support a modem or other communications device. A serial port can be configured for either direct or modem connections. A modem connection supports all the signals necessary for auto-answer operation using the Linux communication protocol, mgetty daemon. For more information, see Appendix B, Cables and Connectors.</i></p>	
2-pin Conxall connector	Secondary power port Backup battery power connects through a DC power cable (PN 48600).

Power ports

The NetRS receiver provides two power ports:

- Primary – connects to the DE26 connector on the rear panel through an inline DC power jack on the multi-port adapter.

Intended for use only with the Trimble AC-to-DC power supply (PN 48800-00).

- Secondary – connects to the 2-pin Conxall connector through the DC power cable with polarity indications (PN 48600).

Intended for battery backup using a nominal 12.6 V lead acid battery system with any type of charging configuration.

Trimble recommends that you use of a minimum 20 Amp-hour lead acid battery in backup power configurations. A 20 Amp-hour battery will provide over 60 hours of backup power, or about 30 hours with 50% derating, if the NetRS and antenna are the only powered devices. Use a low voltage disconnect (LVD) circuit to ensure that the battery will disconnect at 11 V or above. A large capacity battery will provide longer backup time. Trimble does not recommend that you use a small capacity battery. Any battery charging system must match the selected battery size.



Caution – Do not exceed the power supply voltage specification. Use only AC power supply 48800-00 with the NetRS.

Button Functions

The NetRS receiver has only one button, the **Power** button, which is on the front panel. The function of this button is to turn the receiver on (press the button once) and off (press and hold the button for two seconds). If you turn the receiver off using the **Power** button, the receiver it will stay off, regardless of any alarm settings you may have made. To turn the receiver on again, you must use the **Power** button or remove and then reapply power to the receiver.

Power button operations

- When the receiver is switched on and operating, press the **Power** button for at least 2 seconds, but not more than 10 seconds, to switch the receiver off. All LEDs, except the Ethernet LED, turn off briefly when the receiver accepts the button press.
- When the receiver is off, press the **Power** button once to turn the receiver on.

The NetRS receiver requires time to boot up and shut down. The boot up process can take from 75 seconds to 4 minutes to fully startup the Linux operating system, depending on the previous shut down conditions.

To turn the receiver off, press and hold the power button for two seconds. The shut down process normally takes about 20 seconds to 1 minute. During these operations, all the LEDs flash.

Once you press the **Power** button, wait for the operation to complete before you press the button again.

Power saving mode

Use the power saving mode to set options that control whether the receiver remains on continuously or goes to sleep between data logging sessions. This feature is particularly useful for sites with intermittent power or where batteries are used and charging.

Sleep mode

In Sleep mode, the receiver switches to low power when there is no active data logging session. This allows for extended operation when the receiver is running on battery power.

Failsafe wakeup alarm

When the receiver is in Sleep mode, you cannot communicate with it until the receiver wakes up for the next scheduled session. To avoid problems if there is no future session defined, use the Failsafe wakeup alarm. This activates the receiver for a short period at specific times every day.

Control Sleep mode settings from the *Data Logging / Power Saving* screen or the *Data Logging / Status* screen. Set the following controls as required:

- Shut down receiver between data logging sessions?
 - Select *Yes* for the receiver to go into the power saving mode when there are no active sessions. Once in this mode, you cannot communicate with the receiver or use the browser interface until the receiver wakes up.
 - Select *No* to disable Sleep mode. The receiver remains active between sessions.
- Wake up periodically?
 - Select *Yes* for the receiver to wake from Sleep mode for a short time at one or more periodic intervals every day, regardless of the need for a data logging session. This option allow you to establish communications with a receiver when there is no data logging session scheduled.

Specify the duration of the wakeup alarm, and the interval between alarms, from a range of values. The wakeup times are always synchronized to the beginning of the UTC day. For example, if you specify an 8 hour interval, then a periodic wakeup alarm will occur every day at 00:00 UTC, 08:00 UTC, and 16:00 UTC.



Warning – If you turn off the Failsafe wakeup alarm, you could lose communications with a remote receiver.

***Note** – If you press **Power** while the power saving mode is enabled and the receiver is **in Sleep mode**, the receiver temporarily turns on. If there is no session pending, the receiver continues to operate for five minutes, then automatically shuts down. If you visit the NetRS home page for the first time during such a “hold off” period, a dialog appears to warn that the receiver is scheduled to shut down after the hold off time.*

*If you press **Power** while the power saving mode is enabled and the receiver is **on**, power saving mode is disabled and the receiver turns off.*

Other power operations

- If you disconnect all power sources, the receiver shuts down. It automatically turns on again when you reconnect a power source of 12 V or more. The receiver may take longer to boot up when power is restored after a sudden power loss.
- The receiver turns on only if at least one of the power supplies is 12 V or more.

However, when the receiver is on battery power, you can turn it off, or put it into Sleep mode, if the voltage is more than 11 V.

- When you use a standard AC power supply, or a battery that is providing at least 12 Volts (that is, charged to at least 40-50% of capacity), the **Power** button will always function as an on/off switch to boot up or shut down the receiver.

To erase the almanac and the ephemeris

You can erase the almanac and the ephemeris when they are out of date:

1. Press and hold down the **Power** button for 15 seconds. The External Frequency LED turns on.
2. Once you release the **Power** button, the almanac and ephemeris are erased.

To reset the receiver to factory defaults settings



Warning – The reset operation can take 5 to 10 minutes. Wait until the receiver has returned to normal operation before you press the **Power** button or disconnect receiver power. With the antenna connected, wait until the Satellite tracking LED blinks to indicate normal tracking. Alternatively, connect an office computer to the service port and wait until the diagnostics output displays Switching to runlevel: 5.

1. With the receiver switched on, press and hold the **Power** button until the External Frequency LED turns on (at 15 seconds) and then turns off (at 30 seconds).
2. Once the External Frequency LED turns off, release the **Power** button.

The receiver performs a full reset. All parameters, including GPS orbit and tracking information, are restored to the factory default values.

***Note** – The NetRS receiver does not operate in the same way as the Trimble 5700 GPS receiver. If you hold down the **Power** button when you apply power to the receiver, you will not start Monitor mode.*

LED Functions

The six LEDs on the front panel of the receiver indicate various operating conditions. An LED that is constantly lit or is flashing slowly usually indicates normal operation. An LED that is flashing quickly indicates a condition that may require attention. An LED that is unlit indicates that no operation is occurring. The following table defines each possible LED state:

LED state	Description
Flashing slowly	LED is on for 1/2 second and off for 1/2 second
Flash quickly	LED is on for 0.1second every 0.2 seconds
Blinking	LED is on for 1 second every 5 seconds
Off	LED is not lit
On	LED is continuously lit

LED startup sequence

When the receiver switches on, all LEDs turn on for a few seconds, flash until the boot up process is complete, then operate normally.

The LED startup sequence shows if the receiver has started successfully. When you switch on the receiver, the LED startup sequence is:

1. All LEDs turn on briefly
2. All LEDs turn off
3. LEDs operate normally

If the LEDs do not turn off, it means that the system has failed to start correctly.

Note – The LEDs will flash from 20 seconds to 4 minutes, depending on the cause of the failure.

The following tables describe the operation of each LED.

External frequency (orange)

LED state	Description
On	External frequency source is present
Flashing slowly	External oscillator is being used
Off	No external frequency source

Ethernet (green)

LED state	Description
On	Ethernet port is on
Flashing quickly	Ethernet traffic is being received
Off	Ethernet port is off or disconnected

Satellite (amber)

LED state	Description
Flashing slowly	Tracking four or more satellites
Flashing quickly	Tracking fewer than four satellites
Off	Not tracking satellites

Logging (yellow)

Note – Normal operation for the NetRS is continuous logging. There is no LED state to indicate the memory capacity.

LED state	Description
Flashing slowly	Logging data to the internal CompactFlash card
Off	Not logging data

Power management (green and amber)

Green Power LED	Description
On	Power source is healthy (12 V or more). The unit will always power on.
Flashing quickly	Power source is low (11–12 V). The unit will continue to operate, but will not wake up.

Amber Power LED	Description
On	Power source is healthy but is not in use
Flashing quickly	Power source is low but is not in use
Off	No power source

LED flash patterns

Table 3.3 summarizes the LED flash patterns.

Table 3.3 LED flash patterns

Mode	External Frequency (orange)	Ethernet (green)	Satellite (amber)	Logging (yellow)	Power 1 (green / amber)	Power 2 (green / amber)
Receiver off (no power)	Off	Off	Off	Off	Off	Off
Receiver in Monitor mode	On	On	On	On	On	On
Receiver in Sleep mode	Off	Off	Off	Blinking	Off	Off
Receiver on primary Secondary power healthy Logging data			On	Flashing slowly	Green on	Amber on

Table 3.3 LED flash patterns (continued)

Mode	External Frequency (orange)	Ethernet (green)	Satellite (amber)	Logging (yellow)	Power 1 (green / amber)	Power 2 (green / amber)
Ethernet port on Receiving traffic Tracking satellites Power on Port 2 only	Off	On Flashes with traffic	On	N/A	Off	Green on
Primary power source on Secondary power supply low	Any condition	Any condition	Any condition	Any condition	Green on	Amber flashing quickly
Primary power source low Secondary power source available	Any condition	Any condition	Any condition	Any condition	Green flashing quickly	Amber on
Tracking four or more satellites	Any condition	Any condition	Flashing slowly	Any condition	Any condition	Any condition
External frequency in use	Flashing slowly	Any condition	Any condition	Any condition	Any condition	Any condition

Setting up the Receiver

In this chapter:

- Introduction
- Setup Guidelines
- Connecting the Receiver to Other Devices

Introduction

This chapter contains information about setting up the NetRS receiver. It also describes how to connect the receiver to other devices.

Setup Guidelines

Consider the following guidelines when you set up the receiver.

Environmental conditions

The NetRS receiver has a waterproof housing. However, you should take reasonable care to keep the unit dry.

To improve the NetRS performance and long-term reliability, avoid exposing the receiver to extreme environmental conditions, such as:

- Water
- Heat greater than 65 °C (149 °F)
- Cold less than -40 °C (-40 °F)
- Corrosive fluids and gases

Sources of electrical interference

Avoid locating the GPS antenna near the following sources of electrical and magnetic noise:

- Gasoline engines (spark plugs)
- Televisions and computer monitors
- Alternators and generators
- Electric motors
- Equipment with DC-to-AC converters
- Fluorescent lights
- Switching power supplies

Uninterruptible power supply

Trimble recommends that you use an uninterruptible power supply (UPS) to power the receiver. A UPS protects the equipment from power surges and spikes, and keeps the receiver running during short power outages.

For more information, contact your local Trimble dealer.

Lightning protection

Trimble recommends that you install lightning protection equipment at permanent sites. Equipment should include a gas capsule lightning protector in the antenna feed line and appropriate safety grounding. A static dissipater near the antenna can reduce the likelihood of a direct lightning strike. Also, protect any communications and power lines at building entry points. If you use other antennas or aerials, such as a radio modem that distributes real-time correction messages, consider protecting those antennas as well.

For more information, contact your local Trimble dealer, or refer to the Huber and Suhner website at www.hubersuhnerinc.com/Products/pdfs/lightning_protectors/app_0466.pdf.

Mounting the receiver

Figure 4.5 shows the layout and dimensions of the mounting holes on the base of the receiver.

When you mount the receiver on a vertical surface, use four #10 or M5 threaded fasteners. Thread the fasteners into a solid surface, such as half-inch plywood or an equivalent solid structure. Make sure the fasteners are tightly inserted.

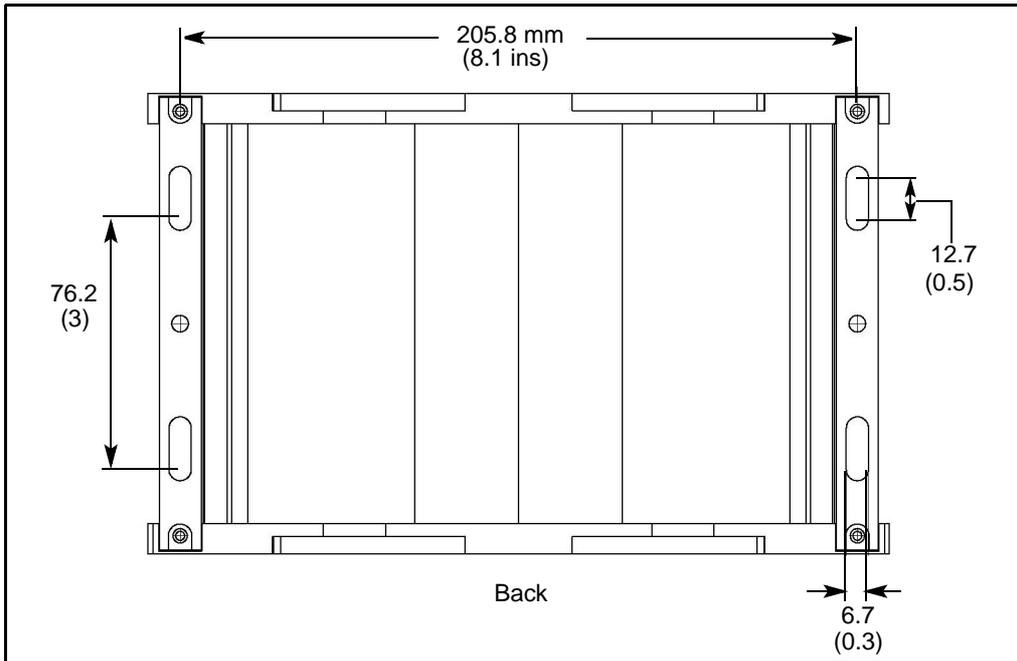


Figure 4.5 Receiver mounting holes

Placing the antenna

Before you mount the antenna for your reference station, you should plan the best location for the antenna, and how you will obtain accurate coordinates for that position.

Figure 4.6 shows a suitable place for an antenna. Trimble recommends a site as free as possible from interference, where the antenna has a clear view of the sky and where there are no obstructions above 10° elevation.

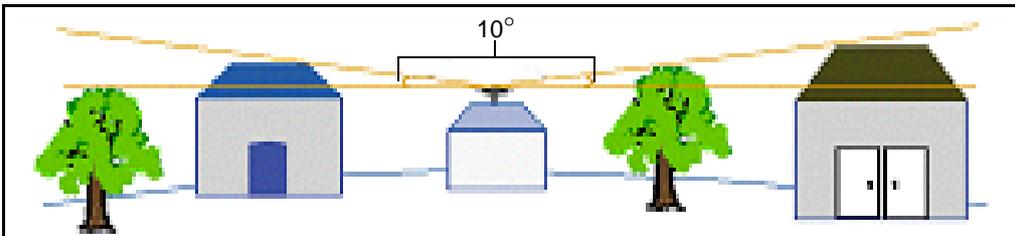


Figure 4.6 Antenna placement

If there are obstructions above 10°, or large metallic objects nearby, the rover receiver may collect data from satellites that the reference station cannot track. This data cannot be used in rover DGPS or RTK solutions.

Connecting the Receiver to Other Devices

This section describes how to connect the NetRS to external devices.

Antenna

The NetRS receiver provides an N-type female connector for connecting to an antenna. The receiver is intended for use with a Zephyr™ Geodetic or Choke Ring antenna. However, you can use it with any Trimble geodetic antenna.

Antenna cabling

Many permanent GPS installations have unique cabling requirements. Depending on the available infrastructure, you may need to mount the antenna a substantial distance from the receiver.

The Trimble NetRS receiver can withstand a loss of 12dB between the antenna and the receiver. The degree of loss in a coaxial cable depends on the frequency of the signal passing through it.

The following table lists some common types of cable and the maximum length you can use before you need an inline amplifier (PN 33411-00) for GPS frequencies.

Cable type	Maximum length for use without inline amplifier
RG-214	30 m (100 ft)
LMR-400	70 m (230 ft)
LMR-500	85 m (280 ft)
LMR-600	106 m (350 ft)
Heliax LDF4/50	165 m (540 ft)
Heliax. LDF4.5/40	225 m (740 ft)

Met-Tilt sensors

You can connect the NetRS receiver to an external meteorological (Met) or Tilt sensor.

Connect the sensors individually to different ports, or serially (daisy chained). For more information, see *Daisy chaining devices*, page 33. The sensor responds to a request for information, and the query and response are time tagged and stored in any T00 file being logged, or transmitted in a RT17 data stream. You can connect a Met or Tilt sensor to any RS232 serial port.

Instruments which can collect meteorological data include:

- Paroscientific MET3 and MET3a (www.paroscientific.com)
- Vaisala PTU200GPS and PTU200GPSMIK (www.vaisala.com)

Instruments which can collect tilt data include:

- Applied Geomechanics D700 and MD900 series (www.geomechanics.com)

Daisy chaining devices

Typically, when you need to collect meteorological and tilt sensor data, you can connect both devices to one RS232 serial port.

To do this, use custom cabling where the transmit data (TXD) RS232 line from one sensor is connected to the receive data (RXD) RS232 line of the next sensor.

The receiver sends a command to the first device in the chain. Each device responds to a specific address. If the command is addressed to the device, the device sends a measurement response to the next device in the chain. If the command is not addressed to that device, the command is transmitted without modification, and the next device may process it. The receiver receives and logs the response from the last device in the chain.

For more information, see *Configuring Met-Tilt sensors*, page 45.

Dial-up modems and terminal adapters

The NetRS receiver provides auto-answer support for a dial-up modem or a terminal adapter connection as a PPP server. You can completely configure the modem or the NetRS receiver can program AT setup strings.

For full control, a modem must be connected to one of the serial ports on the rear panel. Typically, this would be port 2 or port 4, which provide connectors for a DCE device.

You can access and control the receiver over a PPP link. You can also set up a streaming service, such as Trimcom, CMR RTK, or RTCM RTK corrections on a serial port. For a streaming service, the modem must perform the auto-answer function.

For more information, see *Dial-up modem, radio modem, or terminal adapter*, page 43.

Radio modems

The most common data link for Real-Time Kinematic (RTK) surveying is a radio. You can connect the NetRS receiver to an external radio through one of the four serial ports, whether or not the Ethernet port is in use. Typically, use one of the DE9 male ports on the rear panel.

The NetRS receiver supports the following Trimble base radios:

- TRIMMARK™ 3
- TRIMMARK IIe
- TRIMTALK™ 450S

To use an external radio with the NetRS receiver, you need an external power source for the radio. Use the external radio's configuration program to configure the radio modem separately.

To configure the NetRS for RTK operation, you must do all of the following:

- Enable the RTCM or CMR RTK corrections stream on the selected serial port.
- Set the reference station coordinates and broadcast ID.

For more information, see Chapter 5, Configuring the Receiver.

External frequency reference

Use a BNC cable to connect an external frequency reference. The NetRS directly supports a 10 MHz external frequency reference.

An external reference must provide the reference signal with an amplitude in the range +6 to +13 dBm, and a frequency tolerance within +/- 5 ppm over temperature and time.

You can also use one of the following external off-the-shelf adapters to support a 5 MHz or a 20 MHz external reference source with a +7 to +13 dBm input range:

- 5 MHz: Wenzel LNHD HF DOUBLER
(Wenzel PN 601-10726 Rev. A)
- 20 MHz: Wenzel LNFDN FREQUENCY DIVIDER
(Wenzel PN LNFDN-2-20-10-1-10)

Configuring the Receiver

In this chapter:

- Setting up Communications
- Configuring the Receiver Through a Web Browser
- Configuring the Receiver for Connected Devices
- Updating the Receiver Firmware

Introduction

The NetRS receiver communicates typically through a network, such as the Internet. You must create an IP-based link to the receiver to configure the receiver, access files, and update the receiver firmware.

This chapter describes how to connect the receiver to a network, configure the receiver through the HTTP web interface, configure the receiver for a connected device, and install new firmware.

Setting up Communications

Connect the receiver to a network or host computer through one of the following:

- The Ethernet (10Base-T) port
Use a CAT5 cable to connect the receiver to a network hub/switch. Alternatively, use a crossover cable to connect directly to the receiver from a host computer.
- A PPP connection from a serial port
For more information, see Appendix F, Setting Up a PPP Connection.

The NetRS ethernet port supports 10 Base-T full duplex capability with its associated auto-negotiation device. The system automatically configures to the highest interoperable performance mode. The following table shows the possible modes and configurations:

Ethernet port mode	System configuration
1: 10 Base-T full duplex	NetRS and End port devices support auto-negotiation End port device is configured for full duplex

Ethernet port mode	System configuration
2: 10 Base-T half duplex	NetRS and End port devices support auto-negotiation End port device is configured for half duplex
3: 10 Base-T half duplex	NetRS supports auto-negotiation End port device does not support auto-negotiation or There is no ethernet port connected

*Note – If there is a NetRS system configured in mode 3, where the End port device does **not** support the auto-negotiation, but that system is configured for “full duplex” instead of “half duplex”, you may encounter Ethernet data overflows and system problems.*

Use the Port 1 on the receiver front panel to configure initial parameters for a hub/switch based connection. Then access the web-based configuration pages to complete the configuration.

Configuring the Ethernet connection

To configure a 10Base-T connection, you require the following:

- A terminal emulator on the host computer that you will use to configure the receiver
- One of the following:
 - A static IP address, default gateway, and netmask for a static configuration

If you use a crossover cable for the connection, then you can use any address that does not conflict with the IP address and default gateway address of the connected host.
 - A DHCP server on the network
- A 10Base-T network connection and a CAT5 cable.

Connect through a port on a network hub or switch that is also connected to the host computer that you will use to configure the receiver.

Alternatively, use a crossover cable to connect directly to the host computer.

To define a static IP address for the device or obtain network assigned DHCP parameters:

1. Use a standard RS232 cable to connect a computer host to the receiver service port.
2. Configure a terminal emulator program (for example, Hyperterminal under the Windows operating system) for a 115,200 baud 8-N-1 connection with no hardware flow control.

If you use Hyperterminal:

- a. Click **Disconnect**
- b. To set the parameters, select *File / Configure*, then click **Configure**.
- c. After you change the communication values, click **Connect**.

You may also want to enable the terminal emulator to capture text for future review.

3. Connect or cycle the power on the receiver.

As the receiver boots, it will emit diagnostic information through the service port. Figure 5.7 shows the summary sequence that appears when you define a static IP address configuration.

4. When the message Do you want to change Ethernet Configuration? appears, enter **yes**.
5. Enter the new mode, static IP address, default gateway address, and netmask. Press **Enter**.

The new values appear in the summary followed by the message Accept New Configuration?.

6. If the new values are correct, enter **yes**.

```

Current Ethernet Port Configuration:
MAC address: 00:60:35:00:C3:12
Mode: dhcp
IP: 0.0.0.0
Netmask: 255.255.255.0
Gateway: 0.0.0.0
Do you want to change Ethernet Configuration? (yes|no)[no]: yes
-----

New Mode (static|dhcp): static
New static IP Address [0.0.0.0]: 10.1.80.74
New Gateway Address [0.0.0.0]: 10.1.80.1
New Netmask [255.255.255.0]: 255.255.254.0
-----

New Configuration
Mode: static IP
IP: 10.1.80.74
Gateway: 10.1.80.1
Netmask: 255.255.254.0
Accept New Configuration? (yes|no)[yes]: yes
-----

Accepted - Updating configuration files
Applying new Network configuration

```

Figure 5.7 Ethernet port configuration sequence

***Note** – If you do not have a pre-assigned static IP address but you do have DHCP services on your network, you can enter **dhcp** as the Ethernet address mode. To obtain the automatically assigned IP address, monitor the service port output as the receiver boots up.*

Changing the Ethernet configuration


After you configure the receiver, as described in the previous section, you can change the Ethernet address configuration or add Domain Name System (DNS) information (the IP address of one or more DNS servers, a domain name, and a domain search path). You can make these changes from the Ethernet configuration screen.

Once you have the receiver IP address, open the required web pages and complete the network configuration as follows:

1. From a host computer with a network connection to the NetRS, open a web browser, such as Internet Explorer or Netscape.
2. In the URL address field of the browser enter **http://**, followed by the IP address of the NetRS receiver. For example, to access the NetRS web server home page for the configuration in Figure 5.7, enter **http://10.1.80.74**.

Note – You must configure your web browser to bypass any proxy server in use for the connection to the NetRS receiver.

3. From the NetRS main menu, select *Internet*. The *Internet Configuration – Ethernet* screen appears:

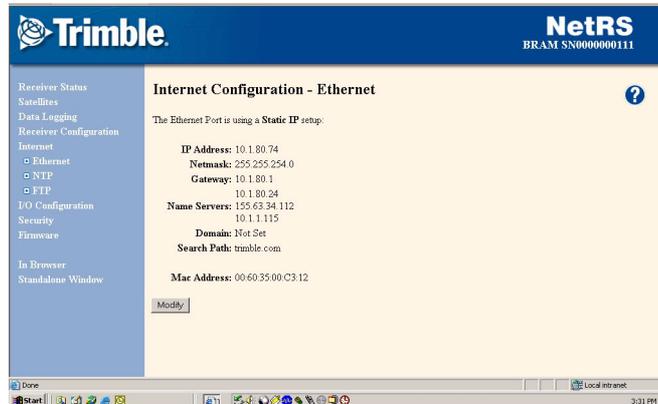

4. Click **Modify**. In the *Ethernet Configuration* screen that appears, change the existing IP address configuration or enter DNS information as required.

Configuring the Receiver Through a Web Browser

This section briefly describes the interface that you use when you access the receiver through a web browser. You can configure the receiver through the Ethernet port or through a serial port that provides a PPP link to the receiver.

Web-based menu

The following table briefly describes options in the NetRS web-based menu system. For more information, refer to the NetRS Help. To access the help, click .

Table 5.4 Web-based menu options

Main menu option	Use the sub-menu screens to ...
Receiver Status	<p>View basic parameters, such as system name, IP address, and firmware version.</p> <p>Modify the system name.</p> <p>View a list of the SVs being tracked, files being logged, a list of currently active streams, power supply voltages, and the receiver internal temperature.</p> <p>View the currently computed GPS position, DOP, and clock offset</p>
Satellites	<p>View a summary of current satellite activity.</p> <p>View a detailed table of current satellite activity.</p> <p>Enable or disable individual satellites.</p> <p>Control and configure the receiver for WAAS.</p> <p>View a text version of the almanac, ephemeris, UTC time, and ionospheric model data broadcast by GPS satellites.</p>
Data Logging	<p>View and manage logging sessions.</p> <p>Manage file space through the Automatic File Deletion mode.</p> <p>Shut down the receiver between sessions.</p> <p>Set the wakeup alarm.</p> <p>View logged data files.</p> <p>Access and download logged files.</p> <p>For more information, see Chapter 6, Logging and Managing Data.</p>

Table 5.4 Web-based menu options (continued)

Main menu option	Use the sub-menu screens to ...
Receiver Configuration	<p>Access global receiver controls, including antenna settings, clock steering, multipath control, masks, and 1 PPS.</p> <p>Enable the external reference.</p> <p>Manage and apply receiver configuration files.</p> <p>Copy a configuration from one receiver to another.</p> <p>Restore the configuration of a receiver.</p> <p>Clear all GPS almanac or ephemeris information.</p> <p>Reset (reboot) the receiver.</p>
Internet	<p>Configure the Ethernet connection.</p> <p>Configure the receiver for one or more NTP servers.</p> <p>Configure FTP access policies, including passwords for named FTP accounts.</p> <p>Control access for anonymous FTP, named account data files, and system files (for firmware upgrades).</p> <p>For more information on FTP access for logging data, see Chapter 6, Logging and Managing Data.</p> <p>For more information on FTP access for updating the firmware, see Updating the Receiver Firmware, page 48.</p>
I/O Configuration	<p>Control serial port and TCP/UDP port configurations and services. (Including PPP, GPS data streaming, and RTK correction services.)</p> <p>Define the precise station position, station ID, and the station name used for RTK correction streams. For more information, see Configuring GPSBase / GPSNet, page 46.</p>

Table 5.4 Web-based menu options (continued)

Main menu option	Use the sub-menu screens to ...
Security	Control web-based access to the receiver. Access levels include System Controls (IP and firmware modification), GPS Controls (GPS tracking and data logging access), and File Access (restricts web based access to internally logged files).
Firmware	Upload and install new receiver firmware and additional extended warranties.
In Browser / Standalone Window	<p>Control the appearance of the browser window. The <i>In Browser</i> and <i>Standalone Window</i> options do not relate to the operation of the NetRS receiver. The default mode is <i>In Browser</i>, where all screens include browser menus and toolbars.</p> <p>If you prefer to have more screen area available to view and manipulate the NetRS web pages, select <i>Standalone Window</i>. A new window appears with menus and toolbars hidden. You can close the <i>Standalone Window</i> and return to the default view when you want to.</p>

Configuring the Receiver for Connected Devices

This section describes how to configure the receiver to operate with different types of external devices.

Dial-up modem, radio modem, or terminal adapter

You can use a dial-up modem, a radio modem, or a terminal adapter (TA) to support PPP access to full receiver services or access to a fixed raw data stream, such as RT17 GPS data or RTK corrections.

Typically, you would connect a modem or TA to a DE9 male port on the rear panel. Alternatively, connect the modem or TA to the rear panel DE9 female port through a null modem adapter.

Note – *The front panel DE9 female port provides only a 3-wire connection, so flow control is not available through this port.*

Make sure that you identify the configuration settings required for the external device. These include the DCE baud rate and hardware flow control. Consider the following issues when you define modem or TA configuration strings:

- A radio-modem must be fully pre-configured.
- If the modem or TA is to be used for a PPP connection, you can preconfigure the modem or you can enter the setup strings in the configuration page. See *Configuring a modem or terminal adapter* below.
- To configure the modem to Auto-answer mode, you can do one of the following:
 - Select *Direct* connection type.
 - Select *Modem* connection type to allow the receiver to manage auto-answer. See Step 6 below.
- If you are using a modem or a TA for RT17 data or RTK correction streaming, then you must do all of the following:
 - Fully configure the modem before you connect it to the receiver.
 - Enable Auto-answer mode in the modem.
 - Use hardware flow control.
 - Program the modem to use RTS to hold off data when there is no active connection.

Note – For flow control, you must use a rear panel DE9 port.

Configuring a modem or terminal adapter

1. From the NetRS main menu, select *I/O Configuration*.
2. Select the serial port to configure.
3. If you are using a PPP server connection, select *PPP*.
4. Select the baud, parity, and flow control.

5. If required when configuring the PPP service, enter the local and remote IP addresses.
6. Select the required connection option:
 - *Modem* – to enable the NetRS to manage the auto-answer operation. Use this option for a PPP connection.
 - *Direct* – if the modem is configured for auto-answer.
7. If you are providing RT17, RTCM, or CMR data:
 - a. Select the required service.
 - b. Enter the appropriate port and define the service parameters.

When you configure RTCM or CMR RTK corrections, configure the ports as described in RTCM or CMR corrections, page 47.

Configuring Met-Tilt sensors

All communication with Met-Tilt external sensors is by ASCII strings through a receiver serial port. The NetRS supports the following forms of command strings to configure and query an external sensor:

- **Initialization** – The receiver sends an initialization string to the sensor at the beginning of every survey session. The string may include calibration parameters to configure the external sensor. In most cases, only device query operations are performed, and an initialization string is unnecessary.
- **Query** – The receiver sends a query string at a pre-defined interval for each device to request a new measurement. Each time the receiver sends a query string, the system assigns a GPS time tag and logs the measurement.

You can configure this service to send one or more initialization and repeat strings (up to a total of six strings) on a regular basis to obtain measurements from external sensors. These sensors include those used to collect meteorological data and/or deformation data (where the tilt

of the sensor is measured). The time tag, query string, and the response from the sensor(s) are then stored in all Trimble T00 files that are being logged in the receiver, and are also sent out through any ports that are configured for streaming RT17 GPS measurements.

Configuring the receiver to use an external sensor

1. From the *I/O Configuration / Port Configuration* screen, select the *Met-Tilt* check box.
2. In the *Parameters for Met-Tilt* group, specify the command to send. In addition:

- To include a carriage return in the command, enter `\r`.
- To include a new line character in the command, enter `\n`.

For example, a typical Met sensor command appears as follows:

```
*0100P9
```

To add a new line character to this command, specify the following:

```
*0100P9\n
```

3. From the *Schedule* drop-down list, select the interval at which to send the command.

Select *Once* to send the command once at the start of every data logging session.

If you specify query commands that occur at the same time, a delay of 10 seconds is added to each subsequent command to avoid possible conflict when sensors are connected serially.

Configuring GPSBase / GPSNet

You can configure GPSBase / GPSNet with an RT17 or a Trimcom service, as follows:

- RT17 – Use a serial port or a TCP port.

- Trimcom – Use only a TCP port, through an Ethernet or a PPP link. For dial-up access, you must configure a PPP dial-up link, as described in Configuring a modem or terminal adapter, page 44.

A default Trimcom service is defined on port 5018. The default RT17 service is at 5017. If required, you can change this configuration

1. From the *I/O Configuration* screen, select *Edit Port Setups*.
2. From the drop-down list, select *TCP Port 5018*. Click **Delete**.
3. To restore the service with a different port value, select *Create New TCP Port* from the *I/O Configuration* screen.

Note – There may be only one Trimcom service running.

4. Configure the parameters as required.

RTCM or CMR corrections

RTK corrections can stream to a serial port or through a TCP/IP port.

Before you create the service:

1. Select *I/O Configuration / Reference Station*.
2. Enter the precise station coordinates and the station ID/name to be used.

To create an RTK service:

1. From the *I/O Configuration* screen, select the required serial port or select *Create New TCP Port*.
2. If you are creating a TCP/IP port, enter the port number.
3. Select and configure an RTCM or a CMR service.

For more information on RTCM and CMR options, refer to the online help.

Updating the Receiver Firmware

The firmware update release is a complete, self-installing, firmware package. It is assembled using the powerful Red Hat Package Manager (RPM) for Linux.

If you are an eligible and registered customer, you will receive an e-mail when a firmware upgrade is available for the NetRS receiver. To obtain the firmware upgrade files, go to www.trimble.com.

Download the NetRS firmware to your computer, then install it on the NetRS system using the web browser. Alternatively, you can log in as “adminFTP” to transfer the update through FTP. You can then install the new firmware over HTTP.

Downloading the firmware upgrade

1. In the advisory e-mail, click the URL link.
Alternatively, enter or paste the URL into the web browser address field.
2. If a download dialog appears, choose to save the file to your local hard disk.

The version number of the release is embedded in the file name. It represents a naming format that guarantees unique file names for subsequent firmware release packages. ***Do not change this file name.***

Uploading the firmware

1. From the NetRS main menu, select *Firmware*, then select *Upload*.
2. In the screen that appears, click **Browse**.
3. In the dialog that appears, find the RPM file that you downloaded to your system from the Trimble website.
4. Select the RPM file. Click **Upload**.

The full RPM file is approximately 12 MB in size. It may take more than 30 minutes to transfer across a slow link, such as a PPP link over a modem connection. From time to time, smaller releases will be available.

The system displays a dialog once the file is successfully transferred. If the transfer fails, an error message appears.

Installing the firmware upgrade

1. Click **Install** next to the firmware description.

Alternatively, click **Install** next to each firmware file line item at the top of the page.

2. In the confirmation pop-up that appears, click **OK** to begin.

While the upgrade is in progress, the screen is not available. The web browser may display an error dialog to advise that the web server is unavailable. Wait five minutes.

***Note** – To monitor the upgrade operation, connect to the front panel service port at 115200-8-N-1, using a terminal emulator such as *Hyperterminal*.*

The receiver reboots and installs the new firmware.

Once the receiver reboots *again*, the upgraded firmware will be operational. Normal LED function resumes.

3. After several minutes, the screen times out. Click **Reconnect**.

Logging and Managing Data

In this chapter:

- Introduction
- Data Logging Sessions
- Data format
- File naming
- Managing Files Through the Web Interface
- Managing Files Using FTP

Introduction

Use the NetRS receiver to log data to the internal CompactFlash card. You can then access the data directly from the receiver, or publish it on a company intranet or on the Internet.

The NetRS CompactFlash card has approximately 150 MB of available space for storing logged data files.

The following table outlines how much data, in days, that you can store.

Interval seconds	6 SVs	8 SVs	10 SVs
0.1	2	1	1
1.0	19	14	12
5.0	74	57	46
15.0	173	136	112
30.0	291	237	200

Data Logging Sessions

A data logging session is the process that creates a data file. To log information to a data file, you must first create a session, then enable it. You can create multiple session definitions for different purposes. These sessions can simultaneously log different types of data on different schedules into separate files. Sessions can run automatically, using one of several scheduling modes.

A session runs automatically only if you have enabled a session. This allows you to define multiple sessions in the receiver, with independent characteristics, but run them only when required. For a Manual session, select the *Enable* check box to start or stop the session.

You can define one or more sessions, then enable some, all, or none of them. This allows you to define multiple modes of data logging in the receiver, then enable any particular mode(s) as required. Be sure to use a different session identifier for any session that will create files with the same start time as another session.

More than one session can be active at the same time. If this occurs, then the receiver records multiple data streams.

There is no arbitrary limit on the number of sessions that you can enable at any time. However, there is a practical limit imposed by the system processing power and available memory.

The following table describes the available schedules.

Schedule	Description
Manual	Manually controlled start and stop time
Once Only	Single session with a starting date, time, and duration. Creates a single file
Daily	Repetitive session with a fixed time and duration every day. Creates a fixed-duration file each day.
Continuous Logging	Once started, this session runs continuously, 24 hours a day. Creates multiple files of the specified durations

Continuous logging is the most common mode used for CORS operation.

Creating or editing a session

1. From the NetRS main menu, select *Data Logging*.
2. In the *Data Logging Status* screen, select *Create a New Session*, or *Edit Sessions*.
3. Configure the new session, or change an existing session, as required.

Enabling a session

To enable a session, select the *Enable* check box in the *Data Logging / Status* screen.

Disabling a session

To disable a session, clear the *Enable* check box.

Data Format

The T00 data format provides control over position and measurement logging rates and whether Code or Carrier phase smoothing is enabled.

Naming Files

Filenames are generated in the form:

StationIDYYYYMMDDHHmmS.ext

For example:

TNCO_NetRs200306052041b.t00

The following table describes each element of the filename.

Element	Description
StationID	The system name, as defined by the GPS network administrator
YYYY	The Julian calendar year
MM	The Julian calendar month
DD	The Julian calendar day
HH	The UTC hour when logging started
mm	The UTC minute when logging started
S	Any letter (a-z) that you define as a session identifier

Auto Delete

If you select the *Auto Delete* check box, the receiver automatically deletes the oldest logged files, as required, to make room for new files. If you do not select the *Auto Delete* check box, the receiver stops logging data once the available file space is full. This option affects all files.

Managing Files Through the Web Interface

Use the web browser interface to manage logged data files that have been recorded and are still stored on the NetRS CompactFlash card.

Storing files

Data that has been logged by the NetRS is stored and organized into files in a directory (folder) tree structure. Use the *Data Logging / Data Files* screen to view and manage these files:

The screenshot shows the NetRS web interface. The top header includes the Trimble logo and 'NetRS IGNSDemo 5N388588888'. The left sidebar contains navigation links: Receiver Status, Satellites, Data Logging (with sub-links for Status, AutoDelete, Power Saving, and Data Files), Receiver Configuration, Internet, I/O Configuration, Security, Firmware, In Browser, and Standalone Window. The main content area is titled 'Logged Data Files' and shows 'Logging Space: 124 649 Mbytes Used 48 365 Mbytes Available'. Below this, the 'Directory path /200308/' is shown with a note that it contains 0 sub-directories and 175 files. A table lists the contents of this directory:

Name	Modified	Size	Delete
Parent Directory	28-Aug-2003 18:59		
1GNSDemo200308101600x.T00	10-Aug-2003 23:59	314K	[X]
1GNSDemo200308110000x.T00	11-Aug-2003 23:59	956K	[X]
1GNSDemo200308110000x.T00	11-Aug-2003 07:59	308K	[X]
1GNSDemo200308110800x.T00	11-Aug-2003 15:59	345K	[X]
1GNSDemo200308111600x.T00	11-Aug-2003 23:59	313K	[X]
1GNSDemo200308120000w.T00	12-Aug-2003 23:59	955K	[X]
1GNSDemo200308120000x.T00	12-Aug-2003 07:59	308K	[X]
1GNSDemo200308120800x.T00	12-Aug-2003 15:59	345K	[X]
1GNSDemo200308121600x.T00	12-Aug-2003 23:59	312K	[X]
1GNSDemo200308130000w.T00	13-Aug-2003 23:59	953K	[X]

The *Data Files* screen displays one directory at a time, starting at the root directory (/). To navigate to another directory, click the directory name in the list.

Click the parent directory link to move up from the subdirectory toward the root directory.

Directory contents

Each directory title shows the directory path. This is followed by a table that shows the directory contents. All subdirectories are listed first, along with the date and time that the contents of that subdirectory

were last modified. Then, all of the data files are listed. Each list shows the name of the file, the date when it was last modified, and the file size in bytes.

Note – The modification time is **not** when the file was created. It refers to the most recent time when data was written to the file, which is usually the time that the data logging session ended.

Sorting files

To sort the directory list, click a column heading. For example, click *Name* to sort the list by file or directory name, or click *Modified* to sort by the modification date, from earliest to latest. The selected column heading appears in bold. Click the column heading again to reverse the order of sorting. Regardless of the sorting method, all directories are listed first, followed by the data files.

Downloading files

To download a file to the computer running your web browser, click the icon or name of a data file. An *Open or Save* dialog appears. When prompted, enter the directory and file name. Once you click **OK** (or the equivalent button), the download begins. While downloading a file, the browser displays a progress dialog.

Deleting files

To delete a data file:

- Click  next to it.

To delete all files and subdirectories:

1. Go to the end of the file list.
2. Click  on the line "Delete ALL FILES AND SUBDIRECTORIES in this directory."

Managing Files Using FTP

To list, download, or delete logged data files from the data logging memory, use any standard FTP client. NetRS FTP access must be enabled for the given function. Use the *Internet / FTP* screen to define FTP access policies and passwords:

Trimble **NetRS**
IGNSDemo 5N8888888888

Receiver Status
Satellites
Data Logging
Receiver Configuration
Internet
 Ethernet
 NTP
 FTP
I/O Configuration
Security
Firmware
In Browser
Standalone Window

FTP Setup

Anonymous FTP

Enabled with Delete
Anyone using the names 'anonymous' or 'ftp' can use FTP to access logged data files. No password is required.
Anonymous user can delete files.

Enabled without Delete
Anyone using the names 'anonymous' or 'ftp' can use FTP to access logged data files. No password is required.
Anonymous user cannot delete files.

Disabled
Anonymous FTP is not available.

Named FTP

Enabled with Delete
User 'netrsFTP' can access logged data files using FTP and the proper password.
User 'netrsFTP' can delete files.

Enabled without Delete
User 'netrsFTP' can access logged data files using FTP and the proper password.
User 'netrsFTP' cannot delete files.

Disabled
User 'netrsFTP' cannot use FTP.

Administration FTP

Enabled
User 'adminFTP' can upload or delete firmware files, using FTP and the proper password.

Disabled
User 'adminFTP' cannot use FTP.

netrsFTP Password
Re-enter Password
If both fields are left blank, the password will not be changed.

adminFTP Password
Re-enter Password
If both fields are left blank, the password will not be changed.

OK Cancel

For Anonymous FTP and Named FTP, make sure that you enable or disable access to the File deletion option as required.

The NetRS provides three options for FTP transfer:

- Anonymous FTP – log in as “anonymous” or “ftp”
- Named FTP – log in as “netrsFTP”
- Administration FTP – log in as “adminFTP”

Administration FTP (for the system administrator) is normally used only for installing and managing firmware. Trimble recommends that you do not manage logged data from this account. To access logged data through FTP, users or automated clients would normally use Anonymous FTP or Named FTP.

Files are created in subdirectories as specified for each session. Each session has a session identifier character. For more information, see Naming Files, page 54.

The directory naming options support moderate sized directories using the default YYYYMM naming scheme. They also support detailed directory structures using the day and/or session identifier. When you use this default scheme, you can navigate the FTP directory quickly and easily.

To access the files remotely through FTP, navigate the directory path to the required timeframe, then transfer and/or delete files as required. FTP sessions always start at the root of the logging hierarchy, under which you will find all directories with YYYYMM naming.

***Note** – You can transfer only those files that end in .T00. Any file opened for an active logging session will end in .T00.A. Do not attempt to transfer those files.*

Real-Time Data and Services

In this chapter:

- Introduction
- Streamed Data Services
- Collecting Data as a Client

Introduction

This chapter describes the streamed data services. It also describes how a client can collect real-time GPS data.

Streamed Data Services

The NetRS supports two streamed data services, RT17 and Trimcom.

RT17

An RT17 service provides GPS observations, ephemerides, and other information, as defined for that service. When a client connects to the service, all data flow is from the receiver to the client.

An RT17 service can have any number of clients. The client can be considered “passive”, because it does not initiate the data stream and has no control over its content. The client cannot request any further information through the TCP connection.

You can configure the receiver for one or more of the Ephemerides, SV Flags, and Almanacs services on different TCP ports. To request updates to ephemeris and other information, a client of an RT17 service can open additional TCP sessions while the NetRS receives and logs the primary RT17 data.

An RT17 service can be used if there are multiple clients requiring the same streamed data, or when a client is unfamiliar with the Trimcom protocol.

Trimcom

With the Trimcom service, the client uses a subset of the standard Trimble TRIMCOMM™ binary communications interface to request ephemeris and time updates, and other data. The client must first

enable an RT17 stream on this connection using Trimcom commands to control the data rate, and the rate and content of the data stream. The client can also send a query for additional information.

The Trimcom client must be “active” to enable the data stream. There can be only one Trimcom service defined on the receiver, and only one client can use this service at a time.

The Trimble GPSBase and GPSNet applications are the most common clients of the Trimcom service when active links are required. Alternatively, they may operate as a “passive” client to an RT17 stream.

Collecting Data as a Client

To access GPS data from an RT17 service, the client simply needs to know how to open a TCP connection to the receiver.

To access GPS data from a Trimcom service, the client must know the binary commands used to enable data streaming. This service is intended primarily for use by GPSBase and GPSNet.

Default Settings

In this chapter:

- Introduction
- Default Settings

Introduction

The following table lists the default settings for the NetRS GPS receiver:

Setting	Default value
Firmware	1.0 17 Sep 2003
Sysadmin password	netrs
Antenna	Type: 86 = Zephyr Geodetic SN00000000 Height: 0.00 meters Height method: Bottom of antenna mount
Clock steering	Enabled
Multipath reduction	Enabled
Elevation mask	0°
PDOP mask	7
One pulse per second output	Disabled Positive
Reference frequency	Using Internal Source External source NOT detected
GPS satellites	Disabled: None IgnoreHealth: None
WAAS	Disabled Enabled satellites: EGNOS-AOR-E, prn121, WAAS-AOR-W, prn123, prn124, prn125, prn126, prn127, prn128, MSAS-1, prn130, EGNOS-IOR, prn132, prn133, WAAS-POR, prn135, prn136, MSAS-2, prn138

Setting	Default value
Reference station	RTCM Identifier: 0 CMR Identifier: 0 Name: CREF0001 Description: Position: Lat: 00°00'00.0000" N X: 6378137.000 m Lon: 000°00'00.0000" E Y: 0.000 m Height: 0.000 meters Z: 0.000 m
Data logging	AutoDelete: Enabled Power Saving Mode: Disabled Enabled Sessions: <i>None</i>

A

Specifications

In this appendix:

- Introduction

Introduction

This appendix lists the specifications for the NetRS GPS receiver.

Feature	Specification
System	Advanced Maxwell 5 custom chip R-track technology for L2C signal tracking capability High precision multiple correlator for L1 and L2 pseudo range measurements Unfiltered, unsmoothed pseudo range measurements data for low noise and low multipath error EVEREST™ multipath rejection (option to enable or disable) Very low noise L1 and L2 carrier phase measurements 12 channels L1 C/A code and carrier phase 12 channels L1/L2 P2 (derived under encryption) and full cycle carrier phase 3 channel WAAS / EGNOS support Clock steering Configuration cloning

Feature	Specification
Data storage	Memory: 150 MB internal, 3400 hours of raw data observables based on recording data from 7 satellites at 15 sec epoch Multiple T00 file logging Continuous logging sessions Query services (SV data, Ephemeris, Almanac)
Accuracy	Static: 5mm+1ppm horizontal RMS; 10mm+1ppm vertical RMS
Electrical	12 - 32 V DC external power input with over-voltage protection 2 Power ports – primary and secondary Remote power cycling through an IP command
Power consumption	Less than 3 Watts for NetRS only 3.5 Watts with a Dorne & Margolin Choke Ring antenna 4.0 Watts with a Zephyr Geodetic
Size	22.8 cm W x 6.5 cm H x 14 cm D (9" W x 2.6" H x 5.5" D)
Weight	1.6 Kg (3.5 lbs.)
Environment	Operating temperature: -40 °C to +65 °C Storage temperature: -40 °C to +75 °C Waterproof to IPX5 Fully sealed from sand, dust, and moisture Humidity: 100% non-condensing
Shock	Shock tested to MIL-810-F Table 516.5-I to survive a 1 m (approximately 3 ft) drop onto hard surface
Vibration	MIL-810-F Figure 514 5c-17 vibration levels on each axis
Communication	4 standard DE9 RS232 ports, including 3 with full modem control lines 1 RJ45 10Base-T Ethernet port All functions (web GUI access, FTP file transfer, RT17 streaming, and remote firmware upload) can be performed through the Ethernet port or a PPP connection over a serial link. At the same time, one or more serial ports can be used for local CMR or RTCM correction transmission, or a remote PPP dial-up through a modem. Basic configuration through the service port and Telnet
Positioning	1 Hz, 2 Hz, 5 Hz, and 10 Hz

A Specifications

Feature	Specification
Outputs	Internal logging (T00) (Intervals: 0.1, 0.2, 0.5, 1, 2, 5, 10, 15, 30, 60, 300, or 600 seconds) RT17 (Intervals: 0.1, 0.2, 0.5, 1, 2, 5, 10, 15, 30, 60, 300, or 600 seconds) CMR, CMR+™, and RTCM 2.1 and 2.3 PPS Sensor I/O - Met-Tilt data logging for devices that support ASCII query/response
Inputs	10MHz external frequency at +6 to +13 dBm with a +/- 5 ppm tolerance over temperature and time Sensor I/O – Met-Tilt data logging for devices that support ASCII query/response
Control software	HTML web browser (Internet Explorer v 5.0 or later and Netscape v 4.78 or later)
Network time	Network Time Protocol
Antenna option	1 antenna port that supports any Trimble survey antenna including the following recommended Trimble antennas: <ul style="list-style-type: none">• Zephyr Geodetic• Dorne & Margolin Choke Ring

Cables and Connectors

In this appendix:

- Introduction

Introduction

This appendix contains pinout information for the NetRS receiver communication ports, connectors, and cables. You can use this information to prepare special cables for connecting the NetRS receiver to a device or instrument that is not supported by a standard or optional cable.

Ports

- Port 1 (Service) is on the front panel
- Ports 2, 3, and 4 are on the rear panel
- The combined Power/Ethernet port is on the rear panel

Cables and connectors

The following table describes the cables and connectors that are provided with the NetRS system:.

Cable or connector	Part number	Description
Primary power / Ethernet	48164	DE26 to RJ45 and DC Jack
Ethernet cable	50150-00	2 m 10BASET CAT5
Secondary power	48600	2-pin Conxall to bare wires
Event marker / 1PPS	11517	BNC(M) to BNC(M)
Serial cable	19309-00	2 m DE9(M) to DE9(F)

Port pinouts

The following table describes the communication port pin-outs:

Port 1 (F) DE9	Port 2 (M) DE9	Port 3 (F) DE9	Port 4 (M) DE9	Primary power / Ethernet (M) DE26
2 – TX (O)**	1 – DCD (I)	1 – DCD (O)	1 – DCD (I)	6 – GND
3 – RX (I)*	2 – RX (I)	2 – TX (O)	2 – RX (I)	7 – EVENT1 (I)
5 – GND	3 – TX (O)	3 – RX (I)	3 – TX (O)	8 – EVENT2 (I)
	4 – DTR (O)	4 – DSR (I)	4 – DTR (O)	10 – ET_GND (O) RJ45 Pin 4
	5 – GND	5 – GND	5 – GND	12 – TX(O)**
	6 – DSR (I)	6 – DTR (O)	6 – DSR (I)	13 – ET_GND (O) RJ45 Pin 5
	7 – RTS (O)	7 – CTS (I)	7 – RTS (O)	14 – ET_GND (O) RJ45 Pin 8
	8 – CTS (I)	8 – RTS (O)	8 – CTS (I)	15 – GND
	9 – RI (I)	9 – RI(O)	9 – RI (I)	16 – ET_RD_MINUS (I) RJ45 Pin 6
				17 – ET_TD_MINUS (O) RJ45 Pin 2
				19 – ET_LED (O)
				21 – RX(I)*
				22 – ET_GND (O) RJ45 Pin 7
				23 – GND
				25 – ET_RD_PLUS (I) RJ45 Pin 3
				26 – ET_TD_PLUS (O) RJ45 Pin 1
Key				
(O)	Output (from the receiver)			
(I)	Input (to the receiver)			
*	Duplicate			
**	Duplicate			

1PPS Output

In this appendix:

- Introduction
- 1PPS Pulse Definition

Introduction

The NetRS receiver can output a one pulse per second (1PPS) time strobe. The pulse is output from the 1PPS port through a BNC cable.

1PPS Pulse Definition

The leading edge of the pulse coincides with the beginning of each UTC second, as shown in Figure C.1. The pulse is driven by an RS-422 driver between nominal levels of 0 V and 7.2 V. The leading edge is positive, rising from 0 V to 7.2 V

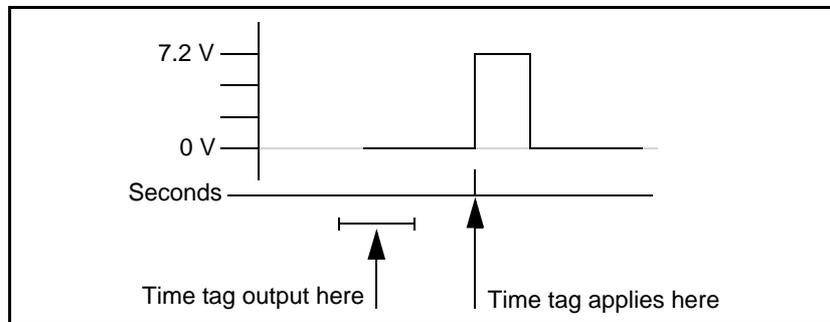


Figure C.1 Time tag relation to 1PPS wave form

The pulse is approximately 8 μsec wide, with rise and fall times of about 100 nsec. Resolution is approximately 40 nsec, but several external factors limit accuracy to approximately $\pm 1 \mu\text{sec}$:

- Position errors, especially with user-entered reference. Each meter of error can result in 3 nsec of error in the 1PPS pulse.
- Antenna cable length. Each meter of cable adds a delay of about 5 nsec to satellite signals, and a corresponding delay in the 1PPS pulse.

Deployment Issues

In this chapter:

- Introduction
- Planning
- Configuring from Factory Defaults
- Monitoring Operation
- Changing modes
- Changing the Configuration

Introduction

This chapter discusses issues related to deploying and operating a network of receivers on a continuous basis.

Most of the issues discussed here relate to networks of any size, but some relate specifically to deploying large networks of tens or hundreds of receivers.

Planning

The NetRS receiver supports named configuration files that can be obtained from any given receiver and cloned to another receiver. Therefore, when you plan a network configuration, you should identify which elements are common to all the receivers in the network, and which elements are unique to individual receivers.

You can store any combination of the following parameters in a configuration file and then restore them to the same receiver or to a different one:

- I/O configurations (including serial, TCP, and UDP port specifications)
- Reference station setup
- Antenna setup
- Data logging sessions (including all defined sessions, the AutoDelete function, and the power saving controls)
- Miscellaneous receiver controls (including masks, clock steering, multipath, 1PPS output, GPS satellite controls, and WAAS controls)
- External frequency source
- Ethernet setup controls
- FTP access controls
- Network Time Protocol (NTP)
- Security setup (including access controls and HTTP accounts)

Configuring from Factory Defaults

In general, you will initially configure the receiver manually. However, for a large network deployment, you could automatically configure the receiver from its factory defaults. To do this, choose one of the following approaches.

- Create an application that works with the service port and 10Base-T port to perform the initial IP address configuration. The application then configures the receiver using HTTP.
- Create an application that works through a PPP connection on a serial port to perform all configuration.

Automated configuration can be carried out entirely through the HTTP link.

To view the status of the receiver after it has been configured, save and then transfer a configuration file. You can also view a summary of global settings in the *Receiver Configuration / Summary* screen.

Monitoring Operation

To monitor GPS performance, you can:

- automatically retrieve standard GPS status information, such as, SV tracking.
- analyze real-time data streams

To monitor system activity, you can:

- retrieve the real-time status of all logging and active streams on a receiver

Changing Modes

You can pre-configure and enable operational modes as necessary, and enable or disable internal logging modes through a single control.

You can pre-define streamed data services for a number of configurations. For example, you can provide services at different data rates. Once the data stream is defined, a client can select a service on a different port to effectively change the mode of real-time streamed data collection.

Changing the Configuration

To reliably change the configuration of one or more receivers, Trimble recommends that you use configuration files. You can verify a configuration change in a laboratory setting, then propagate it into the network where required.

For example, to automate security settings to periodically change passwords, manually enter a change for a remote system on a local receiver, then transmit it to all remote receivers.

If passwords are unique to each receiver, you can automatically create separate partial configurations for multiple receivers through a single receiver at the network operations center. You can then automatically transfer and apply the unique change to each receiver.

To verify the configuration of network receivers, create a configuration file on each receiver and then transfer it to the network operations center. Compare the latest configuration file with the previously transferred configuration file for that receiver. This way, you can monitor a remote receiver for any inadvertent changes.

NetRS Support Software

In this appendix:

- Introduction
- Data Conversion

Introduction

This chapter describes the data format conversion programs and the software utilities that are provided on the *NetRS GPS Receiver CD*.

Data Conversion

The following data format conversion programs are provided.

T00 to DAT file conversion

(runpkr00)

This program converts internally logged T00 format files to the DAT format.

To print the file with full usage information, enter:

- runpkr00

To create a DAT file, enter:

- runpkr00 -dv *filename*.T00

To concatenate multiple consecutive continuously logged files (for example, when converting hourly files to a single 24 hour file), enter one of the following:

- runpkr00 -dv *filename1*.T00+*filename2*.T00+...
- runpkr00 -dv @*listfile* (*Listfile* contains a list of the T00 files to be converted, one filename per line.)

RT17 to DAT file conversion

(rt172dat)

This program converts streamed RT17 data to the DAT format:

- Linux operating system:
rt172dat < *rt17filename* > *filename*.dat 2> /dev/null
- Windows operating system:
rt172dat < *rt17filename* > *filename*.dat 2> null

DAT to RINEX file conversion

(dat2rin)

This program converts DAT format files that were created by runpkr00 or rt172dat to the RINEX format.

The following example shows some of the basic usage for this program:

- `dat2rin -rrunby -oobserver -Aagency -aantennacode [@parmfile] filename.dat`

The values for *antennacode* are:

- G2 – D&M Choke Ring antenna
- GZ – Zephyr Geodetic antenna
- GC – Zephyr Choke Ring antenna

The following example converts DAT files that were created from T00 files to a RINEX file for data collected with a D&M Choke Ring antenna and including L1 and L2 S/N values (-s1 and -s2 parameters):

- `dat2rin -rPBO -oPBO -APBO -aG2 -s1 -s2 filename.dat`

DAT files created from RT17 files do not contain as much meta information about the data collection. You must use a parameter file to specify header fields for which insufficient information is available in the DAT file. An example parameter file (dat2rin.opt) is provided. This file includes full specification of the input and output file names, and all other controls and header fields required for PBO data collection. After editing this parameter file, the example dat2rin command is:

- `dat2rin @dat2rin.opt`

Note – A complete description of the operation of *dat2rin* is provided in the file *Dat2rin.rtf* in the *Doc* directory on the CD.

Setting Up a PPP Connection

In this appendix:

- Introduction
- Linux Operating System
- Windows Operating System

Introduction

This appendix describes how to set up a direct Point-to-Point (PPP) connection for Linux and Windows operating systems.

Linux Operating System

To use PPP with the NetRS as the server and the Linux operating system as the client:

1. Connect the serial port of the Linux machine to the NetRS serial port.
2. Run the following command (where `ttyS0` is the serial port of the Linux system):

```
/usr/sbin/pppd ttyS0 115200 -detach
```

The Linux system responds with the following messages:

```
Using interface ppp0
Connect: ppp0 <--> /dev/ttyS0
Deflate (15) compression enabled
local IP address xxx.xxx.xxx.xxx
remote IP address xxx.xxx.xxx.xxx
```

The PPP connection is now established.

3. To verify the connection, ping the remote IP address.
4. To use this connection with a web browser, configure the browser so that it does not use a proxy server before connecting to the NetRS.

Windows Operating System

To use PPP with the NetRS as the server and the Windows operating system as the client, do one of the following:

- To connect through ports 1 and 3, use a DCE adapter to assert the CD signal. Make sure that the adapter is wired as shown in Figure F.1.

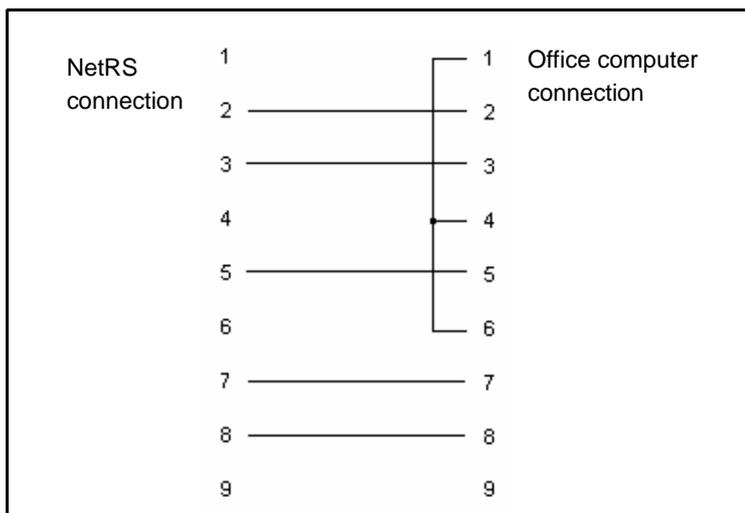


Figure F.1 DCE adapter wiring

- For a direct cable link, connect through ports 2 and 4 using a null modem adapter. Make sure that the adapter is wired as shown in Cables and connectors, page 75. If the connection times out while you are making the PPP link, verify that the null modem is correctly wired.

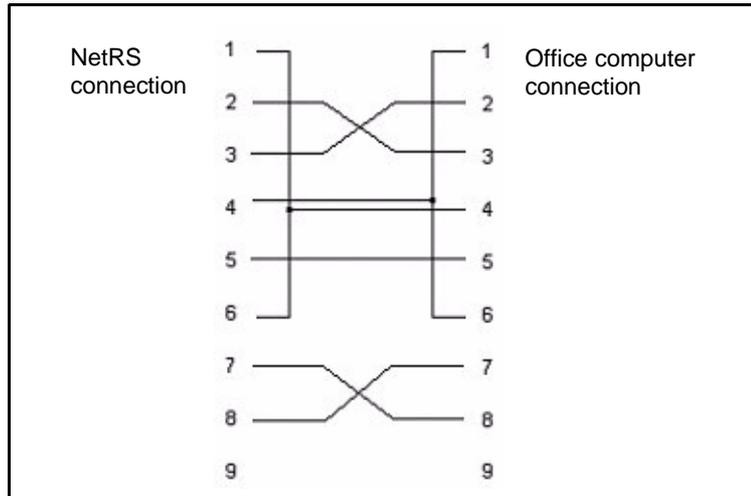


Figure F.2 Null modem adapter wiring

When you use PPP with the Windows operating system, you must create a connection, then configure it.

Creating a connection

1. Click *Start / Settings / Network and Dial-up Connections / Make New Connection*.


The *Network Connection* wizard appears. After you select the required option in each wizard dialog, click **Next** to continue.

2. Select *Connect directly to another computer*.
3. Select *Guest*.


4. From the drop-down list, select the communication port you want to use. For example, Communications cable between two computers (COM1).
5. Select the required availability of this connection (*For all users* or *Only for myself*).
6. Enter a name for the connection. For example, **NetRS PPP on COM1**. Click **Finish**.

Configuring the connection


1. In the *Network and Dial-up Connections* dialog right-click the connection you just created, then select *Properties* from the menu. The following dialog appears:

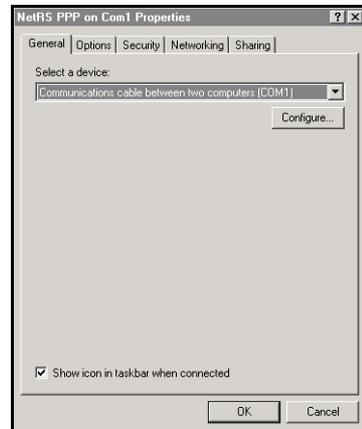

2. In the *General* tab, click **Configure**:
 - a. In the *Maximum speed (bps)* field, select 115200.
 - b. Clear the *Enable hardware flow control* check box. Click **OK**.

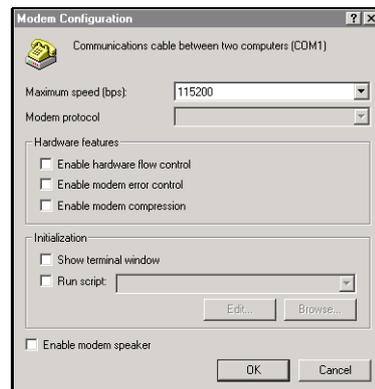



3. In the *Options* tab, clear the *Prompt for name and password, certificate, etc.* check box:

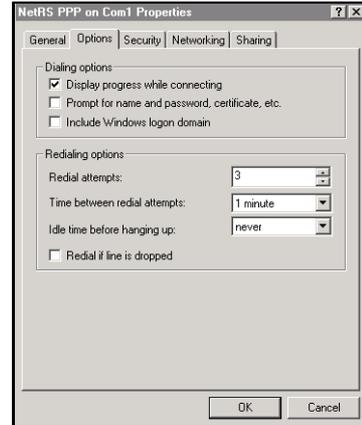

4. In the *Security* tab, select *Typical*:




5. In the *Networking* tab:
 - a. In the *Type of dial-up server I am calling* field, make sure that *PPP* is selected.
 - b. In the *Components checked are used by this connection* group, clear the check boxes for *File and Printer Sharing for Microsoft Networks* and *Client for Microsoft Networks*.
 - c. Select *Internet Protocol (TCP/IP)*, then click **Properties**:
 - d. Make sure that the check boxes for *Obtain an IP address automatically* and *Obtain DNS server address automatically* are selected.

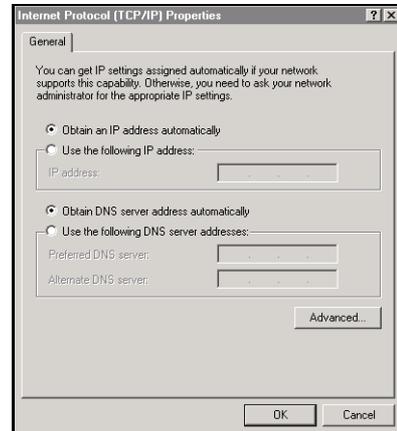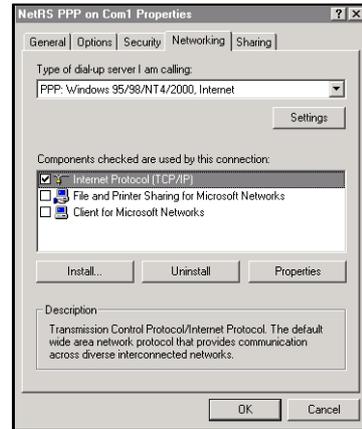

- e. Click **Advanced**. Clear the *Use default gateway on remote network* check box.

Make sure that the *Use IP header compression* check box is selected. Click **OK**.

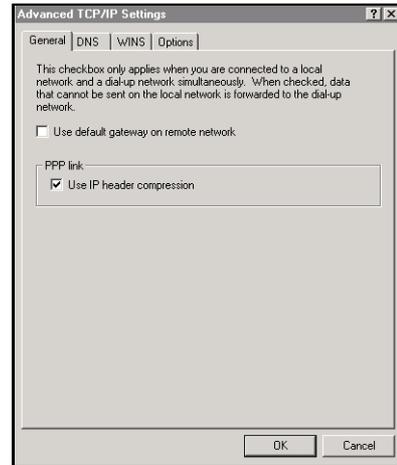

6. Click **OK** in the other dialogs that appear.

Using the connection

Once you have successfully configured the connection, the *Connecting* dialog appears to show that the system is dialing, verifying your username and password, and authenticating the connection. Once the system is connected, the dialog disappears and the dial-up networking icon appears in the system tray.

To view the current connection status, double-click the icon. In the dialog that appears, click the *Details* tab to view the Server (NetRS) and Client (PC) IP addresses. With the Server IP address, you can access NetRS, using the standard network tools like Ping, SSH, and the Web browser. For example, if the Server IP address is 192.168.143.1, start the Web browser, then enter **192.168.143.1** in the URL field.

Closing the session

To close the connection:

1. Double-click the dial-up networking icon.
2. Click **Disconnect**.

Re-connecting the session

To reconnect the PPP session:

1. Click *Start / Settings / Network and Dial-up Connections*.
2. Select the connection that you previously created in *Creating a connection*, page 90.

The *Password* dialog does not appear.

The *Connecting* dialog appears, then closes when the connection is established.

Editing connection properties

1. Select *Start / Settings / Control Panel*.
2. To edit the network connection properties:
 - a. Double-click *Network and Dial-up Connections*.
 - b. Right-click the connection to edit, then select *Properties*.
3. To edit the COM port settings, do one of the following:
 - Open the *Properties* dialog (see the previous step), then click **Configure** in the *General* tab.
 - Double-click *Phone and Modem Options*. In the *Modems* tab, select the connection created in Step 4 on page 91. Click **Properties**.

Deleting a connection

1. Select *Start / Settings / Control Panel*.
2. To delete a network connection:
 - a. Double click *Networking and Dial-up Connections*.
 - b. Right-click the connection to delete, then select *Delete*.

This does not automatically delete the modem entry created for this connection.
3. To delete the modem entry:
 - a. Double click *Phone and Modem Options*.
 - b. In the *Modems* tab, select the entry to delete, then click **Remove**.

Glossary

This section explains some GPS terms and some of the terms used in this manual.

.dat file	The Trimble Standard Storage Format data file for GPS data.
almanac	A file that contains orbit information on all satellites, clock corrections, and atmospheric delay parameters. It is transmitted by a GPS satellite to a GPS receiver, where it facilitates rapid SV acquisition. It can be transferred from the receiver to the GPS processing software on an office computer, where it is then used to predict the best time to collect GPS data. The orbit information is a subset of the ephemeris data, with reduced precision. See also ephemeris.
antenna height	The height of a GPS APC above the point being observed. The uncorrected antenna height is measured from the observed point to a designated point on the antenna, then corrected to the true vertical, manually or automatically, in the software.
antenna phase center	Also called APC. The electronic center of the antenna. The APC often does not correspond to the physical center of the antenna. The radio signal is measured at the APC.
ASCII	American Standard Code for Information Interchange. An eight-bit code for character representation, (seven bits plus parity), used for serial communication.

base station	Also called reference station. A receiver (and antenna) that is set up at a known location specifically to collect data for differentially correcting rover files. The base station calculates the error for each satellite and, through differential correction, improves the accuracy of GPS positions collected at unknown locations by a roving GPS receiver.
baud	A unit of speed, used to describe serial communications data transfer speed from one binary digital device to another. Baud rate is generally one bit per second. See also bits per second.
bits per second	The number of bits sent or received each second. For example, a baud rate of 9600 means there is a data flow of 9600 bits each second. One character equals approximately 10 bits.
BNC (Bayonet Neill Concellman)	A BNC connector provides a secure, easy-to-use means of connecting shielded cables to electronic equipment.
C/A code	See Coarse Acquisition code.
carrier	A radio wave having at least one characteristic (such as frequency, amplitude, or phase) that can be varied from a known reference value by modulation.
carrier frequency	The frequency of the unmodulated fundamental output of a radio transmitter. The GPS L1 carrier frequency is 1575.42 MHz.
carrier phase	The difference between the carrier signal generated by the internal oscillator of a receiver and the carrier signal coming in from the satellite.
CMR (Compact Measurement Record)	A satellite measurement message that is broadcast by the base receiver and used by RTK surveys to calculate an accurate baseline vector from the base to the rover.

Coarse Acquisition code	Also called C/A code or civilian code. The pseudorandom noise (PRN) code, modulated onto a GPS L1 signal. This code helps the receiver to compute the distance from the satellite.
concatenate	To combine separate computer files so that they can be used as one file.
coordinate system	Any 3D reference frame that locates objects in space.
data message	A message included in the GPS signal that reports on the location and health of the satellites as well as any clock correction. It includes information about the health of other satellites as well as their approximate position.
DCE	Data Communications Equipment. The RS-232C interface that a modem or other similar communications device uses to exchange data with a computer.
Differential GPS	Also called DGPS or differential correction. The process of correcting GPS positions at an unknown location with data collected simultaneously at a known location (usually a base station).
DOP	Dilution of Precision. An indicator of the accuracy of a GPS position which takes account of each satellite's location relative to the other satellites in the constellation and their geometry in relation to the GPS receiver. A low DOP value indicates a higher probability of accuracy.
DTE	Data Terminal Equipment. The RS-232C interface that a computer uses to exchange data with a modem or other serial device.

dual-frequency	A type of receiver that uses both L1 and L2 signals from GPS satellites. A dual-frequency receiver can compute more precise position fixes over longer distances and under more adverse conditions because it compensates for ionospheric delays.
elevation mask	The angle below which the receiver will not track satellites. Normally set to 13 degrees to avoid interference problems caused by buildings and trees, and multipath errors.
ephemeris	A list of predicted (accurate) positions or locations of satellites as a function of time. A set of numerical parameters that can be used to determine a satellite's position. Available as broadcast ephemeris or as postprocessed precise ephemeris.
flow control	A means of coordinating two communicating devices so that one transmits data only when the other is prepared to receive it.
FTP	File Transfer Protocol. The standard, high-level protocol for transferring files from one network node to another using TCP/IP.
GPS network administrator	A user charged with maintaining a network of two or more receivers. This role includes functions such as initializing and maintaining communication configurations, managing user authentication and security, performing remote maintenance, and updating firmware.
GPS operator	A user who will change the configuration of the GPS data logging and streams service of one or more receivers.
GPS raw data	The data collected by a GPS receiver for the purpose of processing at a later time. It can be in the form of a .dat file (Trimble raw data file format) or a RINEX file.

GPS time	A measure of time used internally by the NAVSTAR system. GPS time is based on UTC, but does not add periodic “leap seconds” to correct for changes in the earth’s period of rotation.
ID	A unique identity number.
L1	The primary L-band carrier used by GPS satellites to transmit satellite data.
L2	The secondary L-band carrier used by GPS satellites to transmit satellite data.
main service	The service or service group selected in the equipment configuration.
multichannel receiver	A receiver containing many independent channels. Each channel tracks one satellite continuously.
multipath	Interference similar to ghosts on a television screen that occurs when GPS signals arrive at an antenna having traversed different paths. The signal traversing the longer path yields a larger pseudorange estimate and increases the error. Multiple paths can arise from reflections off the ground or structures near the antenna.
NMEA	National Marine Electronics Association. NMEA 0183 defines the standard for interfacing marine electronic navigational devices. This standard defines a number of ‘strings’ referred to as NMEA strings that contain navigational details such as positions. Most Trimble GPS receivers can output positions as NMEA strings.
null modem	A RS232 cable/connector with pins 2 and 3 reversed.
parity	A form of error checking, using a parity bit, that is used in binary digital data storage and transfer. Options for parity checking include Even, Odd, or None.

parity bit	An extra bit added to a group of bits. The parity bit can be a 0 or 1 value so that every byte will add up to an odd or even number (depending on whether odd or even parity is chosen).
position	The latitude, longitude, and altitude of a point. An estimate of error is often associated with a position.
post-processed client	A person (or a computer) who obtains data file(s) from one or more receivers on a systematic basis. This includes any server that mirrors or delivers data.
PPS (1PPS)	Pulse per second. An electrical pulse output by the receiver every second and used by external hardware for precision timing applications.
PRN (Pseudorandom number/noise)	A sequence of digital 1's and 0's that appear to be randomly distributed like noise, but that can be exactly reproduced. PRN codes have a low autocorrelation value for all delays or lags except when they are exactly coincident.
real-time client	A computer that obtains real-time data streams from one or more receivers and provides useful services based on that data. Clients include GPSBase, GPSNet VRS, or any program that requires real-time data streams for operation.
Real-Time Kinematic (RTK)	A method of GPS surveying in real time, using short (stop-and-go) occupation, while maintaining lock on at least 4 satellites. This method requires a wireless data link between the base and rover receivers.
RINEX (Receiver Independent Exchange)	A set of standard definitions and formats to promote the free exchange of GPS data and to facilitate the use of data from any GPS receiver with any software package.

rover	Any mobile GPS receiver and field device collecting data in the field. A roving receiver's position can be differentially corrected relative to a stationary base GPS receiver.
RS-232 (Recommended Standard)	This was originally a nine-wire interface standard for teletype machines from the Electronics Industry Association. It is the standard for computer serial-port transfers.
RTCM	Radio Technical Commission for Maritime Services. The body responsible for defining and updating the RTCM SC-104 standard.
serial port	The communications port on your computer; it's also called the COM or RS-232 port. It's called serial because, although it has nine pins and many wires, the PC sends data on only one wire and receives data on one other wire.
service	Information provided by the receiver or a protocol that is used to exchange data between the receiver and an external device.
session	A period during which one or more GPS receivers log satellites and measure data.
tracking	The process of receiving and recognizing signals from a satellite.
UTC	Universal Time Coordinated. A time standard based on local solar mean time at the Greenwich meridian. See also GPS time.
WAAS	Wide Area Augmentation System.

Index

Numerics

1PPS 72, 78
5700 receiver compatibility 21

A

access disabled 9
accessing data, from RT17 and Trimcom services 63
accessing files 4
accuracy 71
alarm, waking up the receiver from sleep mode 19
almanac and ephemeris, erasing 20
almanacs 8
antenna
 connector 16
 mounting 30
 options 72
auto-answer mode 44

B

battery power 16
BNC port 16
button functions 17

C

C/A code and carrier phase 70
cable pinout information 74
changing
 Ethernet configuration 40
 global settings 5
 modes 82
 receiver configuration 82
closing a PPP session 95
CMR *See* Compact Measurement Format
command strings, external sensors 45
communication
 features 71
 ports 71
communications
 IP 4
Compact Measurement Format 7, 47
CompactFlash card, storage in hours 52
configuration file 80, 82
configuring
 a modem for auto-answer 44
 GPSBase / GPSNet 46
 Met-Tilt sensors 45
 the receiver 4, 36, 41
 the receiver for an external sensor 46
connecting to the Internet 36
connector pinout information 75
contents of file directory 56
Continuously Operating Reference Station 4, 9
control software features 72

- controls, front panel 12
- Conxall connector 16
- CORS *See* Continuously Operating Reference Station

D

- DAT to RINEX file conversion 85
- data
 - formats 54
 - logging 52
 - storing 52
- data format conversion programs 84
- data link for RTK 34
- data logging
 - creating a session 52
 - options 52
 - scheduling modes 52
- data storage features 71
- DCE baud rate 44
- DE9 ports 16
- deformation data 45
- deleting
 - a PPP connection 96
 - files 57
- dial-up modem 43
- disabled access 9
- documentation feedback 2
- downloading files 57

E

- editing PPP connection properties 95
- electrical
 - features 71
 - interference 28
- electronic interference 9
- environment features 71
- environmental conditions 28

- ephemerides 8
- erasing the almanac and ephemeris 20
- Ethernet
 - configuration 38
 - LED 23
 - port 16, 71
- Ethernet (100Base-TX) 36
- Everest Multipath Rejection 70
- external
 - devices 43
 - power 71
- external frequency
 - input port 16
 - LED 23
 - specifications 72
- external sensor command strings 45

F

- Failsafe wakeup alarm 19
- features
 - accuracy 71
 - antenna options 72
 - communications 71
 - control software 72
 - data storage 71
 - electrical 71
 - environment 71
 - inputs 72
 - Network time 72
 - outputs 72
 - positioning 71
 - power consumption 71
 - shock 71
 - system 70
 - vibration 71
- files
 - accessing 4
 - automatically deleting 55
 - deleting 57

- directory contents 56
- downloading 57
- managing through the web
 - interface 56
- naming 54
- sorting 57

firmware, updating 48

flow control 43

front panel controls 12

FTP 4

functions, button 17

G

global settings

- changing 5
- summary 81

GPS antenna connector 16

GPS performance, monitoring 81

GPSBase 46

GPSNet 46

H

Hyperterminal 38

I

initialization string, external sensor 45

input features 72

internal data logging 72

Internet Protocol (IP) 4

Internet, connecting to 36

L

L1 and L2 70

LED

behavior 22

flash patterns 24

operation 23

startup sequence 22

levels of security 4

lightning protection 29

logging data, options 52

logging LED 23

M

managing files through the web interface 56

memory 71

Met sensor command 46

meteorological data 45

Met-Tilt sensors 7, 45, 72

modem 43

monitoring

- GPS performance 81
- system activity 81

mounting the antenna 30

multi-port adaptor 16

N

N connector 16

NetRS services 6

network appliance 5

network configuration, planning 80

network management features 4

O

operating temperature 28, 71

output features 72

P

- performance limitations 9
- performing basic receiver functions 12
- physical features of the receiver 12
- pinout information 74
- planning a network configuration 80
- port pinout information 75
- ports
 - 1 PPS output 16
 - BNC 16
 - communication 71
 - conxall connector 16
 - DE9 (F) 16
 - DE9 (M) 16
 - Ethernet 16
 - external frequency input 16
 - secondary power 16
- positioning features 71
- power
 - battery 16
 - consumption 71
 - management LED 24
 - ports, primary and secondary 71
 - saving 18
- PPP connection
 - configuring 36
 - deleting 96
 - editing properties 95
 - using 94
- PPP service 7
- PPP session
 - closing 95
 - re-connecting 95
- PPP with the Linux operating system 88
- PPP with the Windows operating system 89
- pseudo range measurements 70
- publishing 52
- pulse definition (1PPS) 78

Q

- query service 6, 71
- query string, external sensor 45

R

- radar transmissions 9
- radio modem 43
- radio signals 9
- Radio Technical Commission for Maritime Services 7, 47, 72
- radios, supported 34
- receiver
 - configuring 4, 36, 41
 - configuring for an external sensor 46
 - performing basic functions 12
 - physical features 12
 - setting up 28
 - updating firmware 48
 - viewing status 81
- re-connecting a PPP session 95
- reference station 4
- release notes 2
- RS232 cable 38
- RT17 7, 46, 62, 72
- RT17 to DAT file conversion 84
- RTCM *See* Radio Technical Commission for Maritime Services

S

- satellite LED 23
- security levels 4
- service
 - query 6
 - streaming 6
- setting up the receiver 28
- settings, changing 5

shock features 71
Sleep
 mode 18
software utilities 84
sorting files 57
storage temperature 71
streamed data
 services 62
streaming service 6
support 2
SV status 8
system activity, monitoring 81
system features 70

T

T00 to DAT file conversion 84
TA *See* terminal adapter
technical assistance 2
temperature
 operating 28, 71
 storage 71
terminal adapter 43
Trimble support 2
Trimcom 47

U

U.S. Department of Commerce 9
uninterruptible power supply 29
updating receiver firmware 48
UPS *See* uninterruptible power supply
using a PPP connection 94

V

vibration features 71

W

WAAS / EGNOS 70
wakeup alarm 19
web browser 72
web-based menu 41
website 1

Y

your comments 2

