


## Comms Example: 2 AOA TurboRogue GPS Receivers--2 Radio Modems--Radio Modem--CPU

454 Beth Bartel June 19, 2020 [Comms and Networking Examples \(Diagrams\)](#), [FreeWave](#) 1181

### 2 AOA TurboRogue GPS Receivers--2 Radio Modems--Radio Modem--CPU

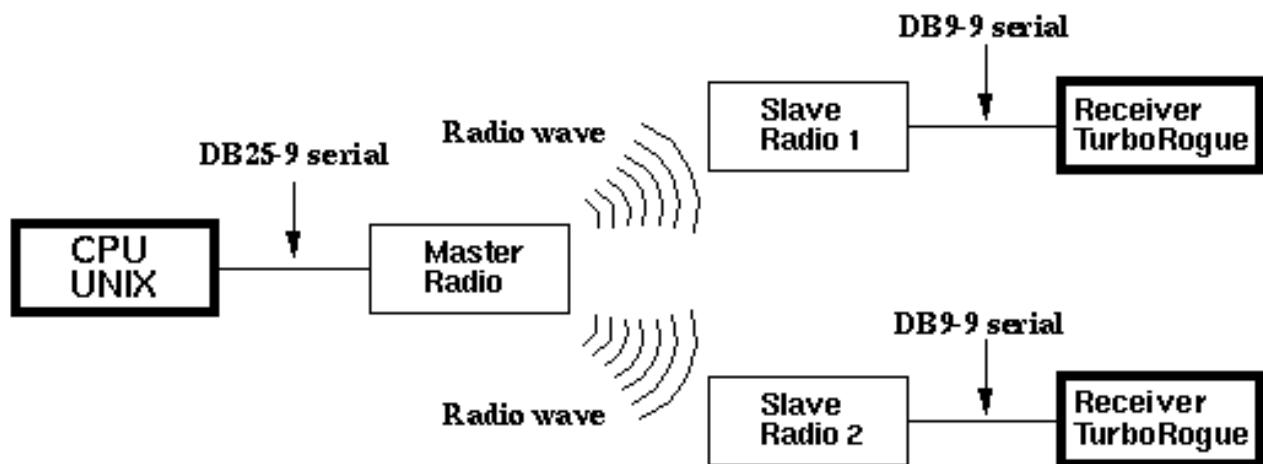

**NOTE: The outdated and offensive "master-slave" terminology has been replaced with "Access point (AP) - Station/Endpoint (STA)" in all instances, but will still remain in the configuration software when implemented**

#### Equipment

In Use by UNAVCO Boulder Facility -

- 1=Chinese (specific information is not available at this time)
- 2=Computer to phone modem (specific information is not available at this time)
- Radio modem: [FreeWave DGR115-H](#)
- Antenna: [Directional Yagi antenna](#)
- CPU: UNIX (Solaris)
- Receiver: TurboRogue SNR-8000

Possible Substitutions (based on site parameters)-

- 1=Chinese (specific information is not available at this time)
- 2=Computer to phone modem (specific information is not available at this time)
- **Radio Modem:** Any radio modem which meets suggested minimum requirements as listed on our [Radio Modems](#) page.
- **Antenna:** [Omnidirectional antenna](#)
- **CPU:** UNAVCO, Boulder currently supports UNIX or LINUX operating systems

**NOTE:** The use of a repeater and directional antennas depends on the specifics of the site, distances signals need to travel, topography etc. For more information contact UNAVCO Support (support

unavco.org).

## Connections in use by Boulder Facility

- 1=Chinese (specific information is not available at this time)
- 2=Computer to phone modem (specific information is not available at this time)
- 1=DB25-9 serial
- 2=Radio wave
- 3=DB9-9 serial

## Equipment Configuration in use by Boulder Facility

### Radio modems

- 1=Chinese (specific information is not available at this time)

- 2=Computer to phone modem (specific information is not available at this time)
- Baud rate 19200 bps
- 8-None-1
- RTS/CTS HW flow control
- packet size max=3 (56 bytes) min=0 (8 bytes)

The base radio modem is set to Point to Point Slave/Master Switchable and the callbook is set to call all numbers (of the slave transceivers). The remote transceivers are set to Point to Point Slave mode.

- [Recommended local radio modem register settings](#)
- [Recommended remote radio modem register settings](#)

## TurboRogue Receiver

- 1=Chinese (specific information is not available at this time)
- 2=Computer to phone modem (specific information is not available at this time)
- Baud rate 19200 bps
- 8-None-1
- port B
- firmware version 3.2

## Download Specifications

**Download software:** PERL scripts on Solaris.

**NOTE:** download rates will vary depending upon site location, local interference, phone line quality, and cellular service.

Online URL:

<https://kb.unavco.org/article/comms-example-2-aoa-turborogue-gps-receivers-2-radio-modems-radio-modem-cpu-454.html>