Vaisala - How to integrate the Vaisala WXT520 with the Ashtech MicroZ

528 Beth Bartel January 26, 2010 Vaisala 2848

Integrating the Vaisala WXT520 with the Ashtech MicroZ



Equipment needed

• Vaisala WXT520 Met-Pack

•

Vaisala WXT520 cable with DB9 serial connector

- 9V battery
- •

Ashtech MicroZ

•

Ashtech MicroZ Y cable

Software Needed

•

Hyperterminal (Private Edition, Ver. 6.3 by Hilgraeve Monroe, Michigan USA was used for this test)

• Vaisala Configuration Tool Version 2.01 r. 9 (see link below)

Configuring the Vaisala WXT520

We first describe how to configure the WXT520 to output a single XDR NMEA v3.0 0183 message containing the following values: Pressure, Temperature, Humidity, Wind Speed, Wind Direction, Rain Accumulation & Hail Accumulation. The reason we choose an XDR NMEA v3.0 0183 message is because this is the only type of met message the Ashtech MircoZ can receive.

One way to configure the WXT520 is using the Vaisala Configuration Tool. The latest version at the time of writing this is Ver. 2.01 r.9; it can be downloaded at http://www.vaisala.com/services/software.html.

Connect the WXT520 to a Windows computer and start up the Configuration Tool. If you don't see any readings coming in, you will have to go into Configuration Setup via File \rightarrow Configuration Setup. The following window will appear:


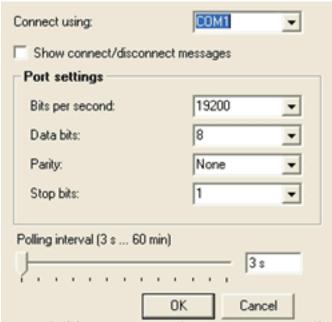


Figure 1: COM port settings for communicating with a WXT520 using the Vaisala Configuration Tool.

Confirm the settings above and click OK. In the main window you should now see some values being read by the Configuration Tool from WXT520.

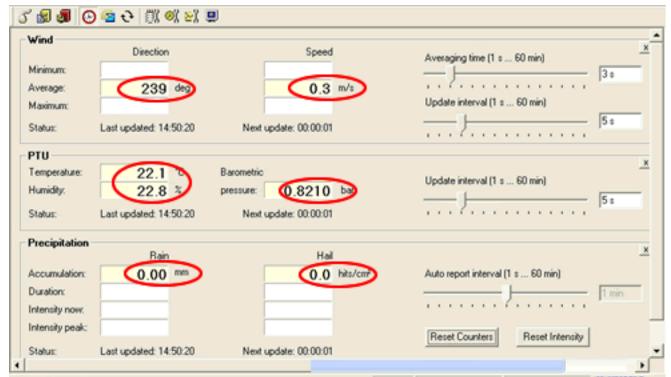

Pigure 2. Wain window of the Vaisala Configuration Tool. The circled values are real whom the WXT520 if it is set up to output Wind, PTU and Precipitation.

Now that the Vaisala Configuration Tool is communicating with the WXT520 we can start setting it up to output the XDR NMEA v3.0 0189 message.

From the Settings drop-down menu select "Device..." The following window will appear; check that the settings are as they are shown here:

Device					
Model:	WXT520		Serial number:	E3240001	
Version:	2.14		PTU sn:	E3120014	
Calibration date:	6.8.2009		Order code:	AAB0BA10B	
Info:	N		Address:	0 🔻	
Enhancements					
Enable heatin	g	Supervi	Supervision interval (1 s 60 min)		
Error messaging				60 min	
Composite message auto transmission			omposite interval (1 s	5	
Communication	protocol		User port setting	js —	
C SDI-12 v1.3			Port type:	RS-232 ▼	
Continuou	s measurements		Bits per second:	19200 🔻	
NMEA ∨3.0			Data bits:	8 🔻	
Query only			Parity:	None ▼	
✓ Use XDR for wind message			Stop bits:	1 🔻	
C ASCII auto			RS-485 line delay	(ms): 25 🔻	
Polling onl					
☐ Response	with CRC				
			OK Car	ncel Defaults	

Figure 3: The Device Configuration window for the WXT520. The key settings in this window are the "Composite Message auto transmission" checkbox and the "Auto Composite interval". Set the interval to what you need it to be. The next key setting in this window is the "Communication protocol". Be sure to select "NMEA v3.0" and check the "Query Only" and the "Use XDR for wind message".

Note that we have checked the "Query Only" box in the Communication Protocol section. This is so that Wind, PTU and Precipitation data don't come through unless the WXT520 is queried for them. Also note that we check "Composite message auto transmission" so the composite message will automatically be output but the individual Wind, PTU and Precipitation will not. This is crucial. After you are done click

OK.

We now configure the Wind, PTU and Precipitation sensors within the WXT520. From the Settings drop-down menu select "Sensors..." You will get the following window. Check that the settings are as they are shown here:

Wind		
		Direction correction (*)
Gust averaging:	1 -	
aux aronaging.	, <u></u>	
		-180 -90 0 90 180
		Averaging time (1 s 60 min)
Speed unit:	m/s ▼	— J——— 3 s
Sampling frequency:	4 Hz ▼	
o unique ig iroquorioy.	11112	Update interval (1 s 60 min)
		1116111111111
PTU		
Temperature unit:	Celsius ▼	Update interval (1 s 60 min)
Barometric pressure unit	h	[5 s
barometric pressure unit	Judi 🔻	
Precipitation		
		Rain overflow reset (1.00 655.35 mm)
Counter reset:	Automatic 🔻	100.00
Rain unit:	Metric ▼	
		Hail overflow reset (10.0 6553.5 hits/mm²)
Hail unit:	Metric ▼	10.0
		Y
A	District	Auto report interval (1 s 60 min)
Auto report based on:	Rain start/en 🔻	1 min
		OK Cancel Defaults

Figure 4: WXT520 sensor settings. The main things to change here are the PTU "Temperature Unit" and the "Barometric pressure unit".

Now we move on to the final step in configuring this WXT520, the Message Settings. From the Settings drop-down menu select "Messages…" The following window will appear. Check that the settings are as they are shown here:

Wind message		Composite message	
Direction minimum	Speed minimum	☐ Direction minimum	Speed minimum
✓ Direction average	✓ Speed average	✓ Direction average	✓ Speed average
☐ Direction maximum	Speed maximum	Direction maximum	Speed maximum
PTU message			
✓ Barometric pressure	Pressure ref. temp	▼ Barometric pressure	Pressure ref. temp
Air temperature	▼ Relative humidity	✓ Air temperature	Relative humidity
Precipitation messag	e		
Rain accumulation	✓ Hail accumulation	▼ Rain accumulation	▼ Hail accumulation
Rain duration	Hail duration	Rain duration	Hail duration
Rain intensity	☐ Hail intensity	Rain intensity	Hail intensity
Rain peak	☐ Hail peak	Rain peak	Hail peak
Self diagnostic			
	□ 3.5 V reference	☐ Heating temp.	☐ 3.5 V reference
Self diagnostic Heating temp. Heating voltage	☐ 3.5 V reference	☐ Heating temp. ☐ Heating voltage	☐ 3.5 V reference

Figure 5: The Wind, PTU and Precipitation message boxes are the values that are queried by the Vaisala Configuration Tool as in Figure 2. The values under the Composite Message Section are the values that will be output to and combined with the GPS U files being recorded on the Ashtech MicroZ.

The WXT520 met-pack is now configured to output messages that look like:

\$WIXDR,A,282,D,1,S,0.1,M,1,C,22.0,C,0,H,23.0,P,0,P,0.8211,B,0,V,0.00,M,0,V,0.0,M,1*42

This message will be read by the Ashtech MicroZ and injected into U files being recorded on the GPS receiver.

In order to check that these messages are being output at the specified rate, connect to the WXT520 via Hyperterminal. Below are the settings you need to set in the Hyperterminal. From within Hyperterminal,

click the drop-down menu File and select "Properties".

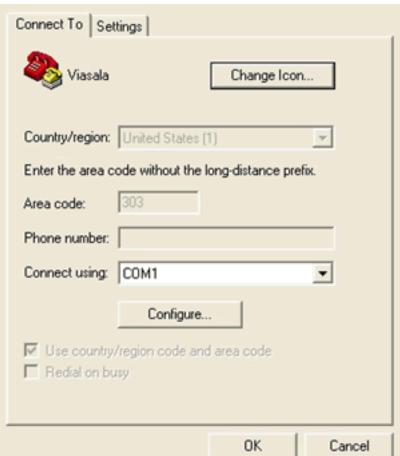


Figure 6: Beginning menu to configure Hyperterminal to communicate with the WXT520.

From here click on the "Settings" tab at the top. The following window will apper. Check that the settings are as they are shown here:

Connect To Settings	
Function, arrow, and ctrl keys act as	
Terminal keys	
Backspace key sends	
Ctrl+H	
Emulation:	
ANSI ▼ Terminal Setup Colors	
Telnet terminal ID: ANSI	
Backscroll buffer lines: 500	
Play sound when connecting or disconnecting	
Exit program upon disconnecting	
ASCII Setup	
gure 7: Set these values on your hyperterminal.	el

From this window click on "ASCII Setup..." to get the following menu. Check that the settings are as they are shown here:


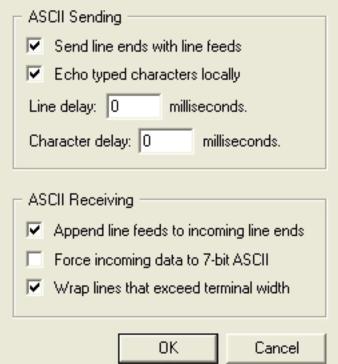


Figure 8: These settings will allow you to send commands to the WXT520 via hyperterminal.

Now that all of this is set, click OK until you get back to the main Hyperterminal menu. You are now ready to connect to the WXT520. Once you connect you will start seeing the Composite Message come through to the terminal.

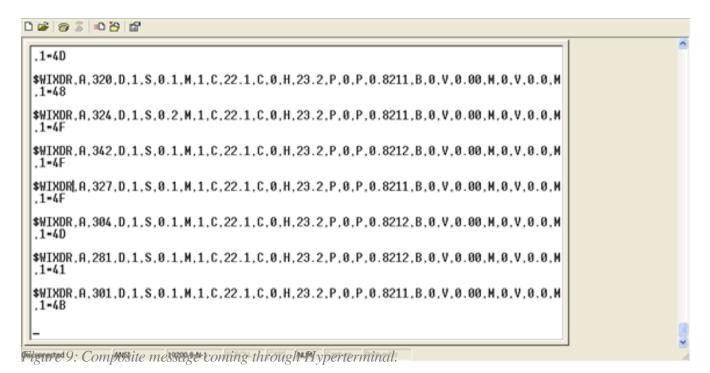

Configuring the Ashtech MicroZ

Now we set up the Ashtech MicroZ GPS receiver to collect met-pack data from the WXT520. Connect

to the Ashtech MicroZ using share in terminal mode. From the command line issue the following command:

> sharc --port /dev/ttyS0 --baud 19200 --terminal

Creation Time: Tue Oct 27 21:48:09 2009

Sharc version 1.00b3

Planned Operations

Communications: Direct Connect

Port: /dev/ttyS0 Baud: 19200 Parity: N Data Bits: 8 Stop Bits: 1

Actual Operations

Communications: OK

OpenConnection:Direct connection achieved...

Querying Receiver ID (attempt 0):

Receiver ID: \$PASHR,RID,UZ,30,CQ00,---XM--3-----C,1A01*20

Found: UZ,30,CQ00,---XM--3-----C,1A01*20

Terminal->

At this point issue the commands:

Terminal-> \$pashs,out,c,met,on

Terminal-> \$pashs,met,cmd,c,*

Terminal-> \$pashs,met,init,c,no

Terminal-> \$pashs,met,intvl,c,[interval you want]

Now you check that the receiver is ready to start receiving met-data from the WXT520 by issuing the following command:



Now connect the serial cable of the WXT520 to the Y cable of the Ashtech MicroZ and you should start seeing the input single slight turn green at the interval you specified the composite message should be output by the WXT520.

In order to double check that data is being injected into the U files being recorded set the receiver to log some data and then download the U file and run teqc on it as follows:

teqc +ash u +met \$Ufile.met \$Ufile.doy > \$Ufile.090

This command will produce a file with extension "met" where the met data is contained. Here is a sample of what the met data file should look like:

